Generator Systems

30,000 Watt
Generator System
Model 076080

Installation and Start-Up Manual

Not for Reproduction

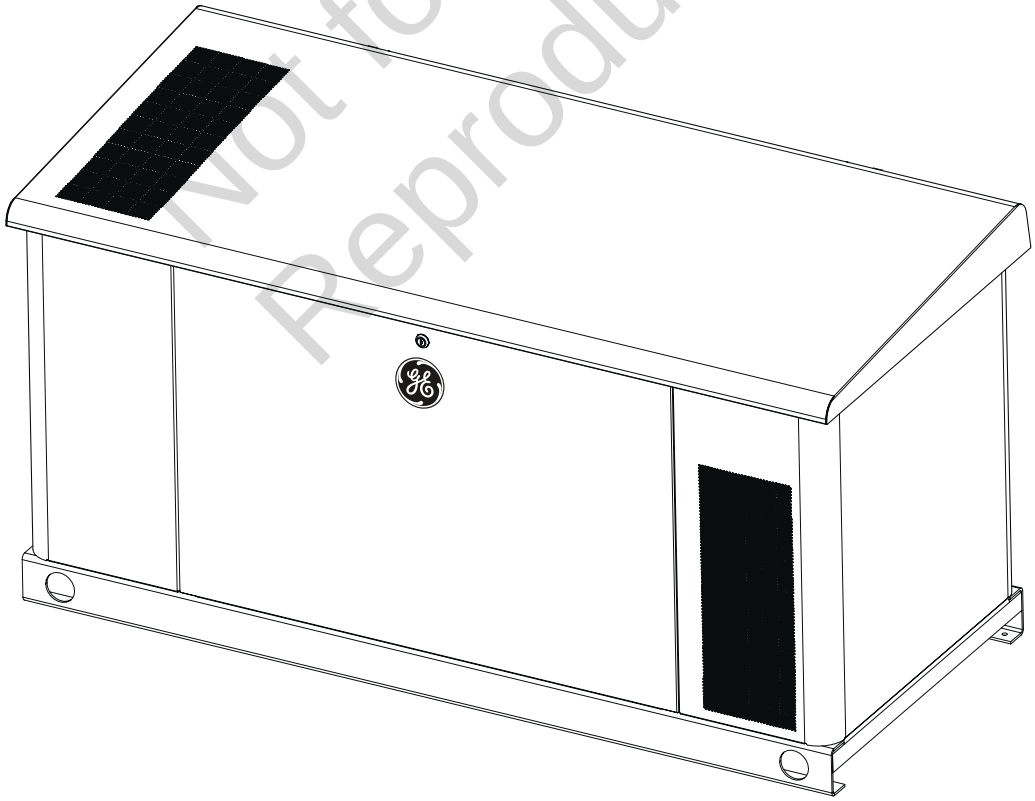

c UL us LISTED

This generator is rated in accordance with UL (Underwriters Laboratories) 2200 (stationary engine generator assemblies) and CSA (Canadian Standards Association) standard C22.2 No. 100-4 (motors and generators).

Thank you for purchasing this quality-built GE generator. We're pleased that you've placed your confidence in the GE brand. When operated and maintained according to the instructions in the operator's manual, your generator will provide many years of dependable service.

This manual contains safety information to make you aware of the hazards and risks associated with residential generator systems and how to avoid them. This generator system is designed and intended only for use as an optional standby system that provides an alternate source of electric power and to serve loads such as heating, refrigeration systems, and communication systems that, when stopped during any power outage, could cause discomfort or inconvenience. **Save these original instructions for future reference.**

This standby generator requires professional installation before use. The installer should follow the instructions completely.

Where to Find Us

You never have to look far to find support and service for your generator. For quick service when you need it most fill out the information below and keep your original receipt with this manual. You may contact Customer Service at **888-575-8226** between 8:00 AM and 5:00 PM CT, or click on SERVICE & SUPPORT at www.standbygeneratorsystems.com, which provides a list of authorized dealers.

For Future Reference

Please fill out the information below and keep with your receipt to assist in unit identification for future purchase issues.

Date of Purchase: _____

Generator

Model Number _____

Model Revision _____

Serial Number _____

Not for Reproduction

Table of Contents

Safety Rules 4
Installation 7
Owner Responsibilities 7
Installing Dealer/Contractor Responsibilities 7
Unpacking Precautions 8
Delivery Inspection 8
Shipment Contents 8
Cold Weather Kit 8
Installation Checklist - GE Generator Systems 9
Generator Placement 10
Exhaust Side of Generator 10
Placement of Standby Generator to
REDUCE THE RISK OF CARBON MONOXIDE POISONING 11
Other General Location Guidelines 12
Placement of Standby Generator to REDUCE THE RISK OF FIRE 13
Electrical and Fuel Inlet Locations 15
The Gaseous Fuel System 19
Fuel Conversion 20
Fuel Consumption 21
System Connectors 22
Grounding the Generator 24
Service Code Detection System 24
Menu 26
Final Installation Considerations 30
Initial Start-up (No Load) 31
Operation 33
Automatic Operation Sequence 33
Setting the Exercise Timer 33
Wireless Monitor 34
Installation Inspection 38
Schematic Diagram 40
Wiring Diagram 42

Not for Reproduction

Safety Rules

Important Safety Instructions

SAVE THESE INSTRUCTIONS - This manual contains important instructions that should be followed during installation and maintenance of the generator and batteries.

Safety Symbols and Meanings

Explosion

Fire

Electrical Shock

Toxic Fumes

Rotating Parts

Hot Surface

Auto Start

Explosive Pressure

Chemical Burn

Rotating Belt/Pulley

Rotating Fan Blade

Exploding Battery

Lift Hazard

Read Manual

⚠ The safety alert symbol indicates a potential personal injury hazard. A signal word (DANGER, WARNING, or CAUTION) is used with the alert symbol to designate a degree or level of hazard seriousness. A safety symbol may be used to represent the type of hazard. The signal word NOTICE is used to address practices not related to personal injury.

⚠ **DANGER** indicates a hazard which, if not avoided, *will* result in death or serious injury.

⚠ **WARNING** indicates a hazard which, if not avoided, *could* result in death or serious injury.

⚠ **CAUTION** indicates a hazard which, if not avoided, *could* result in minor or moderate injury.

NOTICE addresses practices not related to personal injury.

The manufacturer cannot possibly anticipate every possible circumstance that might involve a hazard. The warnings in this manual, and the tags and decals affixed to the unit are, therefore, not all-inclusive. If you use a procedure, work method or operating technique that the manufacturer does not specifically recommend, you must satisfy yourself that it is safe for you and others. You must also make sure that the procedure, work method or operating technique that you choose does not render the generator system unsafe.

⚠ **WARNING** Running engine gives off carbon monoxide, an odorless, colorless, poison gas.

Breathing carbon monoxide could result in death, serious injury, headache, fatigue, dizziness, vomiting, confusion, seizures, nausea or fainting.

- Operate this product ONLY outdoors in an area that will not accumulate deadly exhaust gas.
- Keep exhaust gas away from any windows, doors, ventilation intakes, soffit vents, crawl spaces, open garage doors or other openings that can allow exhaust gas to enter inside or be drawn into a potentially occupied building or structure.
- Carbon monoxide detector(s) MUST be installed and maintained indoors according to the manufacturer's instructions/ recommendations. Smoke alarms cannot detect carbon monoxide gas.

⚠ **WARNING** The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

⚠ **WARNING** Certain components in this product and related accessories contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.

Not for Reproduction

⚠ WARNING Storage batteries give off explosive hydrogen gas during recharging.

Slightest spark will ignite hydrogen and cause explosion, resulting in death or serious injury.

Battery electrolyte fluid contains acid and is extremely caustic. Contact with battery contents could cause severe chemical burns. A battery presents a risk of electrical shock and high short circuit current.

- DO NOT dispose of battery in a fire. Recycle battery.
- DO NOT allow any open flame, spark, heat, or lit cigarette during and for several minutes after charging a battery.
- DO NOT open or mutilate the battery.
- Wear protective goggles, rubber apron, rubber boots and rubber gloves.
- Remove watches, rings, or other metal objects.
- Use tools having insulated handles.

⚠ WARNING Propane and Natural Gas are extremely flammable and explosive, which could cause burns, fire or explosion resulting in death or serious injury.

- Install the fuel supply system according to NFPA 37 and other applicable fuel-gas codes.
- Before placing the generator into service, the fuel system lines must be properly purged and leak tested.
- After the generator is installed, you should inspect the fuel system periodically.
- NO leakage is permitted.
- DO NOT operate engine if smell of fuel is present or other explosive conditions exist.
- DO NOT smoke around the generator. Wipe up any oil spills immediately. Ensure that no combustible materials are left in the generator compartment. Keep the area near the generator clean and free of debris.

⚠ WARNING Moving parts could crush and cut.

Starter and other rotating parts could entangle hands, hair, clothing, or accessories resulting in serious injury.

- NEVER operate generator without protective housings, covers, or guards in place.
- DO NOT wear loose clothing, jewelry or anything that could be caught in the starter or other rotating parts.
- Tie up long hair and remove jewelry.
- Before servicing, remove 15 Amp fuse from control panel and disconnect **Negative** (**NEG** or **-**) battery cable.

⚠ WARNING Hazardous Voltage - Contact with power lines could cause electric shock or burn, resulting in death or serious injury.

Lifting Hazard / Heavy Object - Could result in serious injury.

- If lifting or hoisting equipment is used, DO NOT contact any power lines.
- DO NOT lift or move generator without assistance.
- Use lifting pipes as described in *Lifting the Generator*.
- DO NOT lift unit by roof as damage to generator will occur.

⚠ WARNING Generator produces hazardous voltage.

Failure to properly ground generator could result in electrocution.

Failure to isolate generator from power utility could result in death or serious injury to electric utility workers due to backfeed of electrical energy.

- DO NOT touch bare wires or bare receptacles.
- DO NOT use generator with electrical cords which are worn, frayed, bare or otherwise damaged.
- DO NOT handle generator or electrical cords while standing in water, while barefoot, or while hands or feet are wet.
- If you must work around a unit while it is operating, stand on an insulated dry surface to reduce the risk of a shock hazard.
- DO NOT allow unqualified persons or children to operate or service generator.
- In case of an accident caused by electrical shock, immediately shut down the source of electrical power and contact the local authorities. **Avoid direct contact with the victim.**
- Despite the safe design of the residential generator, operating this equipment imprudently, neglecting its maintenance or being careless could cause possible injury or death.
- Remain alert at all times while working on this equipment. Never work on the equipment when you are physically or mentally fatigued.
- Before performing any maintenance on the generator, disconnect the battery cable indicated by a **Negative** (**NEG** or **-**) first. When finished, reconnect that cable last.
- After your system is installed, the generator may crank and start without warning any time there is a power failure. To prevent possible injury, always set the generator's system switch to **OFF**, remove the service disconnect from the disconnect box AND remove the 15 Amp fuse BEFORE working on the equipment.

Not for Reproduction

⚠ WARNING Exhaust heat/gases could ignite combustibles or structures resulting in death or serious injury. Contact with muffler area could cause burns resulting in serious injury.

- DO NOT touch hot parts and AVOID hot exhaust gases.
- Allow equipment to cool before touching.
- Exhaust outlet side of weatherproof enclosure must have at least 5 ft. (1.5 m) minimum clearance from any structure, shrubs, trees or any kind of vegetation.
- Standby generator weatherproof enclosure must be at least 5 ft. (1.5 m) from windows, doors, any wall opening, shrubs or vegetation over 12 inches (30.5 cm) in height.
- Standby generator weatherproof enclosure must have a minimum of 5 ft. (1.5 m) overhead clearance from any structure, overhang, or trees.
- DO NOT place weatherproof enclosure under a deck or other type of structure that may confine airflow.
- Use only flexible fuel line provided. Connect provided fuel line to generator. DO NOT use with or substitute any other flexible fuel line.
- Smoke detector(s) MUST be installed and maintained indoors according to the manufacturer's instructions/recommendations. Carbon monoxide alarms cannot detect smoke.
- Keep at least minimum distances shown in *General Location Guidelines* to insure for proper generator cooling and maintenance clearances.
- Replacement parts must be the same and installed in the same position as the original parts.

⚠ CAUTION Installing the 15 Amp fuse could cause the engine to start at any time without warning resulting in minor or moderate injury.

- Observe that the 15 Amp fuse has been removed from the control panel for shipping.
- DO NOT install this fuse until all plumbing and wiring has been completed and inspected.

⚠ WARNING Hot pressurized coolant could cause serious injury.

- DO NOT open radiator cap when hot.
- Before servicing, allow coolant to cool.

⚠ CAUTION Excessively high operating speeds could result in minor injury.
Excessively low speeds impose a heavy load on generator.

- DO NOT tamper with governed speed. Generator supplies correct rated frequency and voltage when running at governed speed.
- DO NOT modify generator in any way.

NOTICE Exceeding generators wattage/amperage capacity could damage generator and/or electrical devices connected to it.

- Start generator and let engine stabilize before connecting electrical loads.

NOTICE Improper treatment of generator could damage it and shorten its life.

- Use generator only for intended uses.
- If you have questions about intended use, contact your authorized dealer.
- Operate generator only on level surfaces.
- Adequate, unobstructed flow of cooling and ventilating air is critical to correct generator operation.
- The access panels/door must be installed whenever the unit is running.
- DO NOT expose generator to excessive moisture, dust, dirt, or corrosive vapors.
- Remain alert at all times while working on this equipment. Never work on the equipment when you are physically or mentally fatigued.
- DO NOT start engine with air cleaner or air cleaner cover removed.
- DO NOT insert any objects through cooling slots.
- DO NOT use the generator or any of its parts as a step. Stepping on the unit could cause stress and break parts. This may result in dangerous operating conditions from leaking exhaust gases, fuel leakage, oil leakage, etc.
- If connected devices overheat, turn them off,disconnect them from generator, and determine the cause of overheating.
- Shut off generator if:
  - -electrical output is lost;
  - -equipment sparks, smokes, or emits flames;
  - -unit vibrates excessively;
  - -unit makes unusual noises.

Not for Reproduction

Installation

This product is only for use as an optional generator system which provides an alternate source of electric power and to serve loads such as heating, refrigeration systems, and communication systems that, when stopped during any power outage, could cause discomfort or inconvenience.

NOTICE This product does NOT qualify for either an emergency standby or legally required standby system as defined by NFPA 70 (NEC).

- Emergency generator systems are intended to automatically supply illumination, power, or both, to designated areas and equipment in the event of failure of the normal supply. Emergency systems may also provide power for such functions as ventilation where essential to maintain life, where current interruption of the normal supply would produce serious life safety or health hazards.
- Legally Required standby generator systems are intended to automatically supply power to selected loads in the event of failure of the normal source which could create hazards or hamper rescue or fire-fighting operations.

Every effort has been made to ensure that information in this manual is accurate and current. However, we reserve the right to change, alter, or otherwise improve the product and this document at any time without prior notice.

Only current licensed electrical and plumbing professionals should attempt generator system installations. Installations must strictly comply with all applicable codes, industry standards, laws and regulations.

Not for Reproduction

Owner Responsibilities

- Read and follow the instructions given in the operator's manual.
- Follow a regular schedule in maintaining, caring for and using your generator, as specified in the operator's manual.
- Carbon monoxide detector(s) MUST be installed and maintained indoors according to the manufacturer's instructions/ recommendations. Smoke alarms cannot detect carbon monoxide gas.
- Smoke detector(s) MUST be installed and maintained indoors according to the manufacturer's instructions/ recommendations. Carbon monoxide alarms cannot detect smoke.

Installing Dealer/Contractor Responsibilities

- Read and observe the safety rules.
- Install only an UL approved transfer switch that is compatible with the generator.
- Read and follow the instructions given in this installation and start-up manual.

Unpacking Precautions

The unit is shipped ready for installation on a prepared reinforced cement slab or engineered base. Avoid damage from dropping, bumping, collision, etc. Store and unpack carton with the proper side up, as noted on the shipping carton.

Delivery Inspection

After removing the packing crate and carton, carefully inspect the generator for any damage that may have occurred during shipment.

If loss or damage is noted at time of delivery, have the person(s) making delivery note all damage on the freight bill and affix his signature under the consignor's memo of loss or damage. If loss or damage is noted after delivery, separate the damaged materials and contact the carrier for claim procedures. Missing or damaged parts are not warranted.

Shipment Contents

The generator system is supplied with:

- Fully-serviced coolant system
- Fully-serviced oil/lubricating system
- Flexible fuel hook-up
- Installation and start-up manual
- Operator's manual
- Spare access door keys
- Spare 15 Amp ATO-type fuse
- Touch up paint
- Remote wireless monitor
- Antenna

To be supplied by Installer:

- Starting battery
- Reinforced concrete mounting pad
- Connecting wire and conduit
- Fuel supply valves/plumbing
- Two (2) AA batteries for remote wireless monitor
- Carbon monoxide detector(s)
- Smoke detector(s)
- Two 60" lengths of 2" Schedule 40 pipe (NOT conduit)
- Crane, lifting straps, chains or cables, spreader bar
- Torque screwdriver, 5 to 50 inch-pound range
- Voltage/frequency meter
- Various special tools and equipment

Not for Reproduction

Cold Weather Kit

If operating the generator below 30°F (-1°C), it is HIGHLY RECOMMENDED that a Cold Weather Kit be installed.

Cold Weather Kit, Part No. 6270 includes:

- Battery warmer, Part No. 6182
- Engine block heater, Part No. 6269

Battery warmer and engine block heater are also sold separately.

These items are available at your local servicing dealer.

If you need more information on this matter, please call 800-732-2989, between 8:00 AM and 5:00 PM CT.

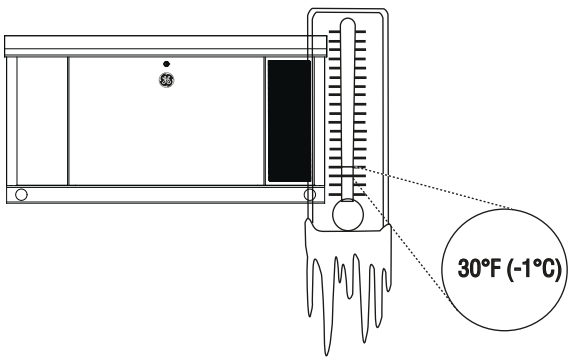

Installation Checklist - GE Generator Systems

Proper installation of the generator requires the completion of the following tasks:

Carbon Monoxide (CO) Detector/ Smoke Detector

- ☐ Carbon Monoxide (CO) detector(s) installed and in working order.
- ☐ Smoke detector(s) installed and in working order.

Placement

- ☐ Required permits have been obtained.
- ☐ Generator placed in an area free from Carbon Monoxide (CO) buildup. See ***Placement of Standby Generator to Reduce the Risk of Carbon Monoxide Poisoning***.
- ☐ Generator placed in an area compliant to NFPA 37. See ***Placement of Standby Generator to Reduce the Risk of Fire***.
- ☐ Generator placed in an area free from water damage. See ***Other General Location Guidelines***.
- ☐ Generator placed in an area free from utility and other systems. See ***Other General Location Guidelines***.
- ☐ Generator placed in a debris free zone. See ***Other General Location Guidelines***.
- ☐ Generator placed on flat ground with provisions for water drainage. See ***Other General Location Guidelines***.

Fuel

- ☐ Generator is connected to fuel source with steel flexible fuel line, has no fuel leaks and conforms to local codes. See ***The Gaseous Fuel System***.
- ☐ Proper fuel pressure has been measured with all gas appliances operating. See ***The Gaseous Fuel System***.
- ☐ Fuel system has been configured for the proper fuel supply: Natural gas (NG) or liquefied petroleum (LP). See ***Fuel Conversion***.
- ☐ Fuel type: (circle one) **NG LP**
- ☐ Fuel pipe size used: (circle one) **3/4" 1" 1-1/4" 1-1/2" See NFPA 54, Chapter 6.**
- ☐ Fuel pressure at fuel inlet port with generator on and at full load and all gas appliances turned on and operating _____.

Electrical

- ☐ Generator neutral is connected to Automatic Transfer Switch. See ***Generator AC Connection System***.
- ☐ Generator is grounded***. See Grounding the Generator and NFPA 70 (NEC), Article 250.35B.***
- ☐ Generator is connected to the transfer switch with the specified wiring. See ***Utility Circuit Connection*** and ***Transfer Switch Communication***.
- ☐ Generator is connected to the transfer switch with the specified wiring. #18AWG twisted pair wiring from the generator control panel to the transfer switch is installed in a separate conduit from high voltage wires unless the insulation rating on all wiring is rated for 600V. See ***Transfer Switch Communication***.
- ☐ Dipswitches in most transfer switches must be set to correspond to the wattage of the generator. See ***Transfer Switch Operator/Installation Manual.***

Operation

- ☐ Cold Weather Kit is installed in temperatures below 30°F (-1°C). **See Cold Weather Kit.**
- ☐ Correct battery type is installed and fully charged. See ***Final Installation Considerations***.
- ☐ Generator engine oil level is at full mark. See ***Final Installation Considerations***.
- ☐ Coolant is full.
- ☐ Circuit breaker is in the ON position.
- ☐ Utility was shut off to test the operation of generator and transfer switch. Note any fault codes and make corrections as required.
- ☐ AC Voltage Output_____.
- ☐ Frequency Output_____.

Owner Information

Name: _____

Address: _____

_____

Phone/e-mail:_____

Unit Information

Generator Model: _____

Generator Serial Number: _____

Installing Contractor Information

Name: _____

Address: _____

_____

Phone/FAX: _____

Electrician: _____

Signature: _____

Plumber: _____

Signature: _____

Inspector Information

Name: _____

Address: _____

_____

Title:_____

Inspection Date:_____

This generator has been installed per the manufacturer's instructions:

Installing Contractor Signature: _____

Date: _____

Not for Reproduction

Generator Placement

Before installing the generator, consult with the owner and convey the following requirements, which must be satisfied before the installation is complete.

There are two equally important safety concerns in regards to carbon monoxide poisoning and fire. There are also several general location guidelines that must be met before the installation is considered complete.

⚠ WARNING Running engine gives off carbon monoxide, an odorless, colorless, poison gas.

Breathing carbon monoxide could result in death, serious injury, headache, fatigue, dizziness, vomiting, confusion, seizures, nausea or fainting.

- Operate this product ONLY outdoors in an area that will not accumulate deadly exhaust gas.
- Keep exhaust gas away from any windows, doors, ventilation intakes, soffit vents, crawl spaces, open garage doors or other openings that can allow exhaust gas to enter inside or be drawn into a potentially occupied building or structure.
- Carbon monoxide detector(s) MUST be installed and maintained indoors according to the manufacturer's instructions/ recommendations. Smoke alarms cannot detect carbon monoxide gas.

Exhaust Side of Generator

Not for Reproduction

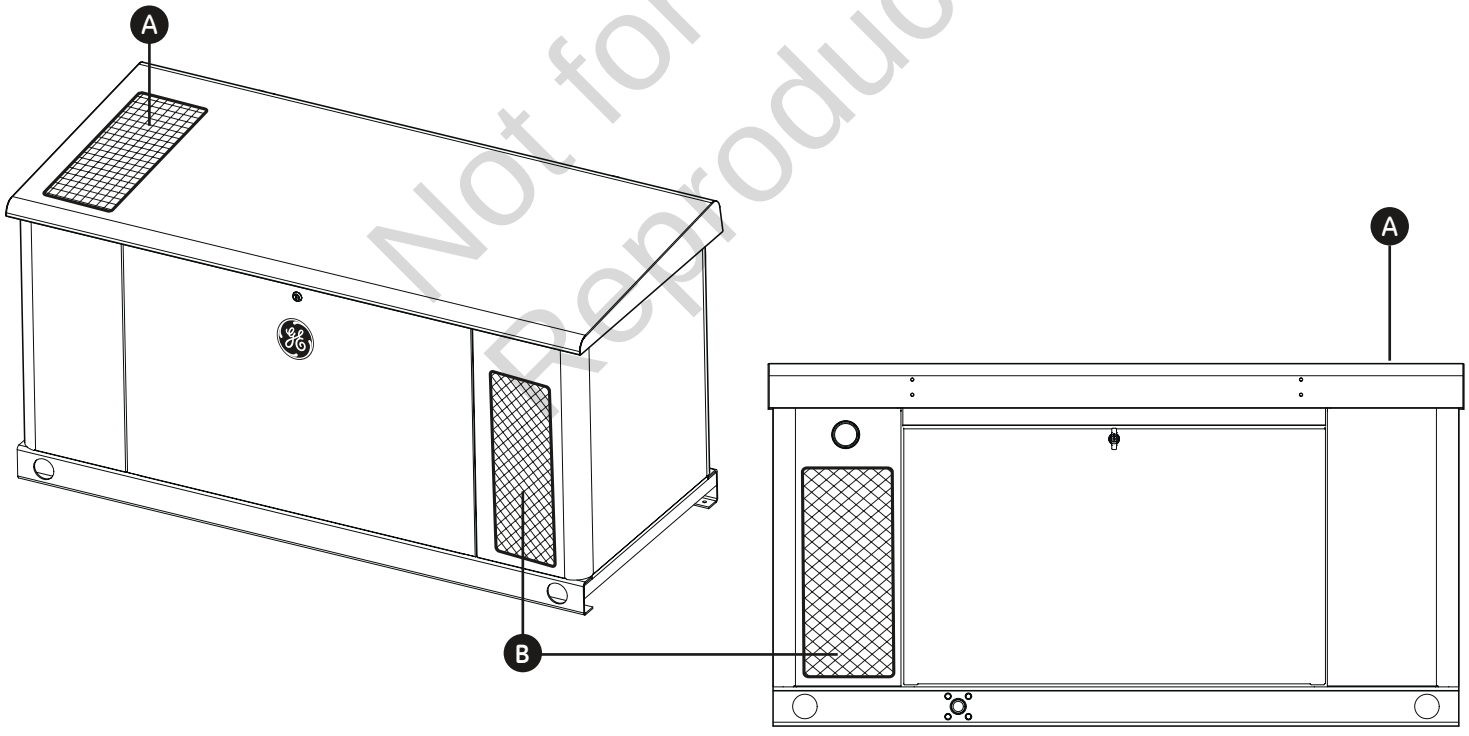

A Exhaust outlet side of weatherproof enclosure (exhaust exits out top of enclosure)

B Intake side of weatherproof enclosure opposite exhaust side

Placement of Standby Generator to REDUCE THE RISK OF CARBON MONOXIDE POISONING

The figure below displays POTENTIAL points of entry for Carbon Monoxide Gas.

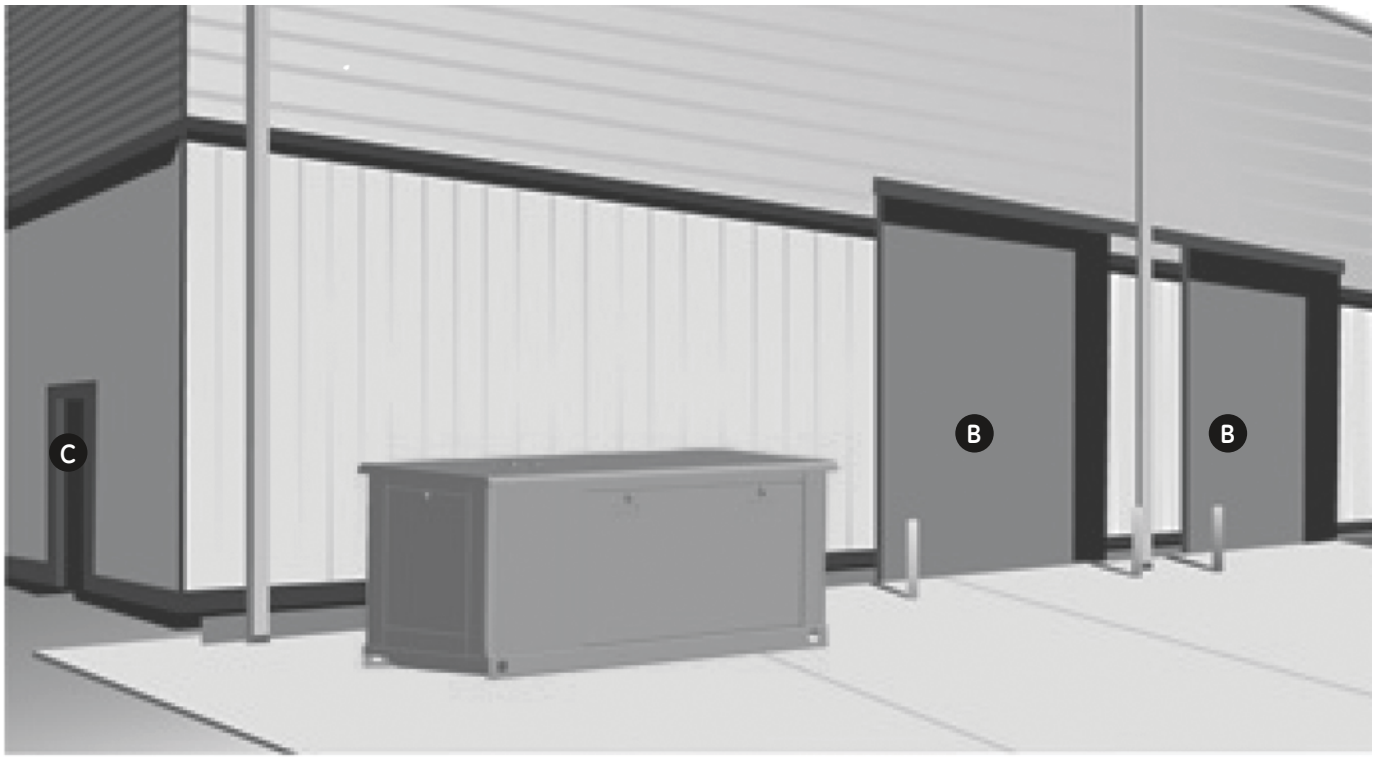

All fossil fuel burning equipment, such as standby generators, contains carbon monoxide (CO) gas in the engine exhaust. CO gas is odorless, colorless and tasteless and is unlikely to be noticed until a person is overcome. CO gas can kill you so it is required that the following is included as part of the installation:

- Install generator outdoors in an area that will not accumulate deadly exhaust gas.
- DO NOT install generator where exhaust gas could accumulate and enter inside or be drawn into a potentially occupied building or structure.
- By law it is required in many states to have a Carbon Monoxide (CO) detector in operating condition in homes and other structures occupied by people. Carbon monoxide detector(s) (A) MUST be installed and maintained indoors according to the manufacturer's instructions / recommendations. A CO monitor is a sensor that detects hazardous levels of CO. When there is a buildup of CO, the monitor will alert the occupants by flashing visual indicator light and alarm. Smoke alarms cannot detect CO gas.
- Nearby structures may be exposed to the engine exhaust from your standby generator and must be considered when installing your standby generator.
- Ensure exhaust gas is kept away from:

(B) overhead doors

(C) doors

(D) windows (not shown)

(E) other openings that can allow exhaust gas to enter inside or be drawn into a potentially occupied building or structure (not shown).

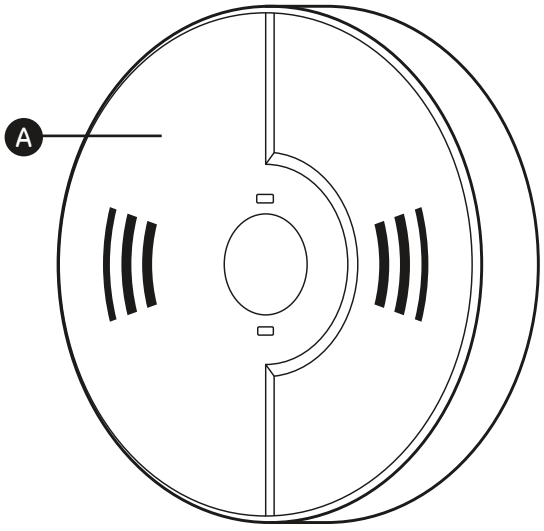

Not for Reproduction

- Direct the standby generator exhaust away from or parallel to the building or structure. DO NOT direct the generator exhaust towards a potentially occupied building, structure, windows, doors, ventilation intakes, soffit vents, crawl spaces, open garage doors or other openings where exhaust gas could accumulate and enter inside or be drawn into a potentially occupied building or structure.

- DO NOT place standby generator in any area where leaves or debris normally accumulates. Position standby generator in an area where winds will carry the exhaust gas away from any potentially occupied building or structure.

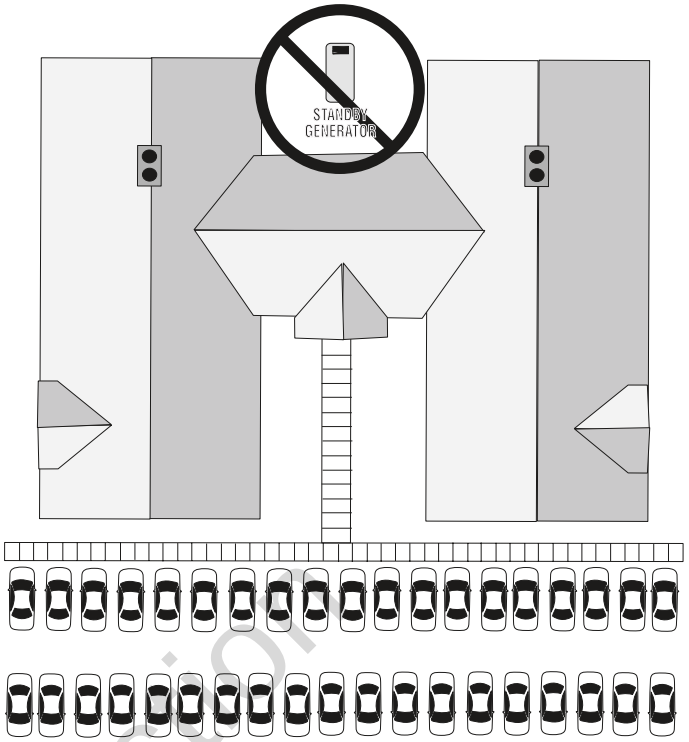

Not for Reproduction

Other General Location Guidelines

- Place the standby generator in a prepared location that is flat and has provisions for water drainage.
- Install the standby generator in a location where sump pump discharge, rain gutter down spouts, roof run-off, landscape irrigation, or water sprinklers will not flood the unit or spray the enclosure and enter any air inlet or outlet openings.
- Install the standby generator where it will not affect or obstruct any services (including covered, concealed and underground), such as telephone, electric, fuel (natural gas / LPG vapor), irrigation, air conditioning, cable, septic, sewer, well and so forth.
- Install the standby generator where leaves, grass, snow, etc will not obstruct air inlet and outlet openings. If prevailing winds will cause blowing or drifting, you may need to construct a windbreak to protect the unit.

Placement of Standby Generator to REDUCE THE RISK OF FIRE

The National Fire Protection Association (NFPA) standard NFPA 37 establishes criteria for minimizing the hazard of fire during the installation and operation of stationary combustion engines. NFPA 37 limits the spacing of an enclosed generator from openings in walls, structures and combustible materials outside the enclosure.

The placement requirements provided are based on compliance to NFPA 37 2010 section 4.1.4.

⚠ WARNING Exhaust heat/gases could ignite combustibles or structures resulting in death or serious injury.

- Exhaust outlet side of weatherproof enclosure must have at least 5 ft (1.5 m) minimum clearance from any structure, shrubs, trees or any kind of vegetation.
- Standby generator weatherproof enclosure must be at least 5 ft (1.5 m) from windows, doors, any wall opening, shrubs or vegetation over 12 inches (30.5 cm) in height.
- Standby generator weatherproof enclosure must have a minimum of 5 feet (1.5 m) overhead clearance from any structure, overhang or trees.
- DO NOT place weatherproof enclosure under a deck or other type of structure that may confine airflow.
- USE ONLY flexible fuel line provided. Connect provided fuel line to generator, DO NOT use with or substitute any other flexible fuel line.
- Smoke detector(s) MUST be installed and maintained indoors according to the manufacturer's instructions/ recommendations. Carbon monoxide alarms cannot detect smoke.
- DO NOT place weatherproof enclosure in manner other than shown in illustrations.

Not for Reproduction

Examples of standby generator locations to reduce the risk of fire:

Legend for Generator Locations to reduce the risk of fire.

- **A** Standby weatherproof enclosure must be at least 5 ft (1.5 m) from windows, doors, any wall opening, shrubs or vegetation over 12 inches (30.5 cm) in height.
- **B** Exhaust outlet side of weatherproof enclosure must have at least 5 ft (1.5 m) minimum clearance from any structure, shrubs, trees or any kind of vegetation.
- **C** Standby weatherproof enclosure must have a minimum of 5 feet (1.5 m) overhead clearance from any structure, overhang or trees.

NOTICE DO NOT place weatherproof enclosure under a deck or other type of covered structure that may confine airflow.

Vertical Clearances

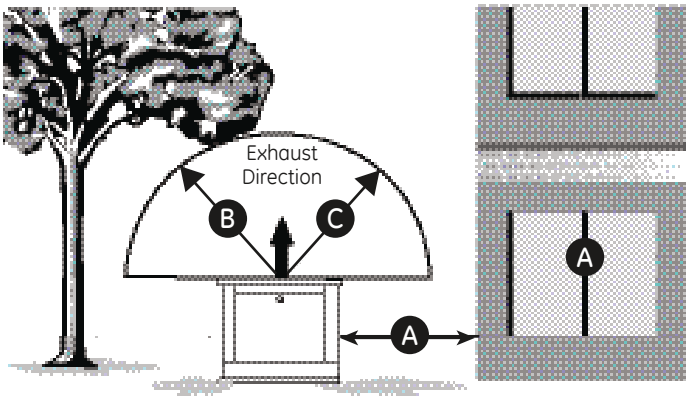

Typical Installations with Structure Without a Fire Rating

NOTICE The figures below show the minimum installation distances allowed to structures and items listed in legend.

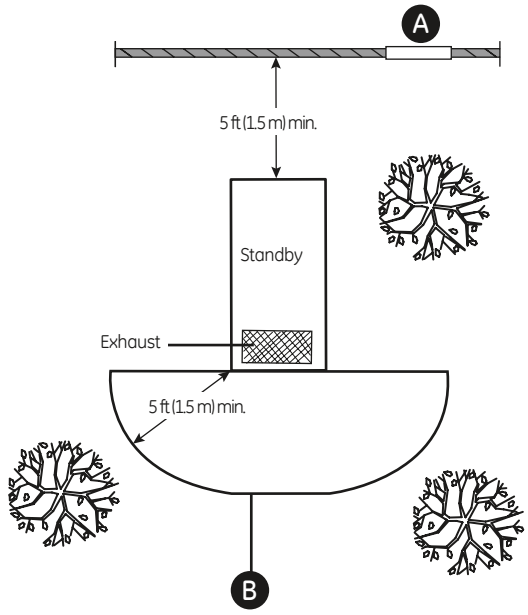

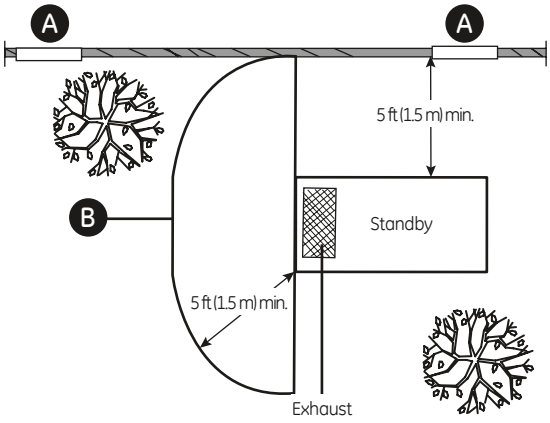

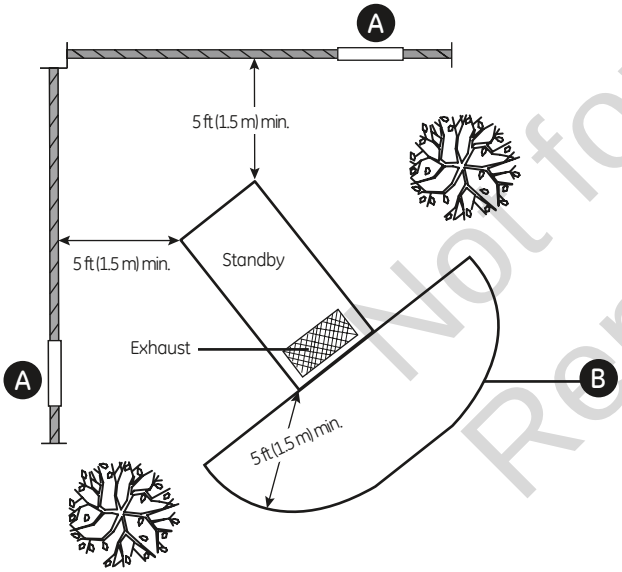

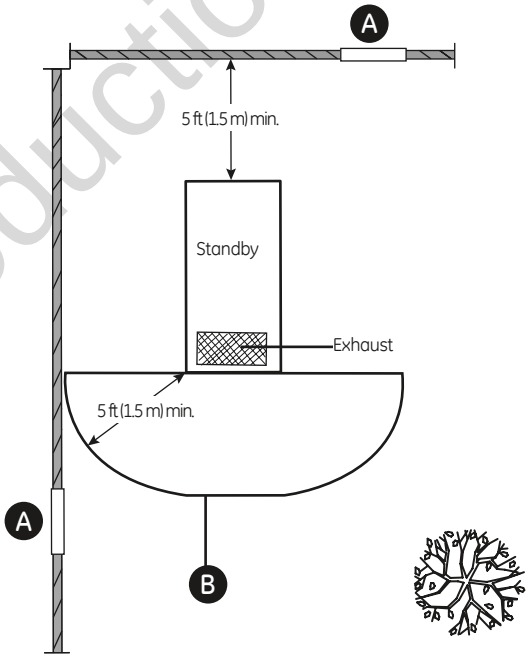

Not for Reproduction

Legend for Generator Locations to reduce the risk of fire.

- **A** Standby weatherproof enclosure must be at least 5 ft (1.5 m) from windows, doors, any wall opening, shrubs or vegetation over 12 inches (30.5 cm) in height.
- **B** Exhaust outlet side of weatherproof enclosure must have at least 5 ft (1.5 m) minimum clearance from any structure, shrubs, trees or any kind of vegetation.
- **C** Standby weatherproof enclosure must have a minimum of 5 feet (1.5 m) overhead clearance from any structure, overhang or trees.

NOTICE DO NOT place weatherproof enclosure under a deck or other type of covered structure that may confine airflow.

Concrete Slab

At the appropriate location, construct a concrete slab:

- 28 day compression strength of 3000 psi (200 MPa)
- Minimum 5" (13 cm) thick
- Minimum 6" (15 cm) wider than enclosure on all sides (shown as D in figure)
- Strengthen slab with No. 6 reinforcing bars (on 12" (30.5 cm) centers) or 8 ga. steel wire fabric (6" (15 cm) centers).

Attach unit to slab at four corner locations **A** with minimum 5/16"(8 mm) diameter masonry anchor bolts long enough to secure the unit.

The fuel inlet location **B** the wire entry location **C** the concrete slab **D** and the exhaust outlet **E** are shown for reference.

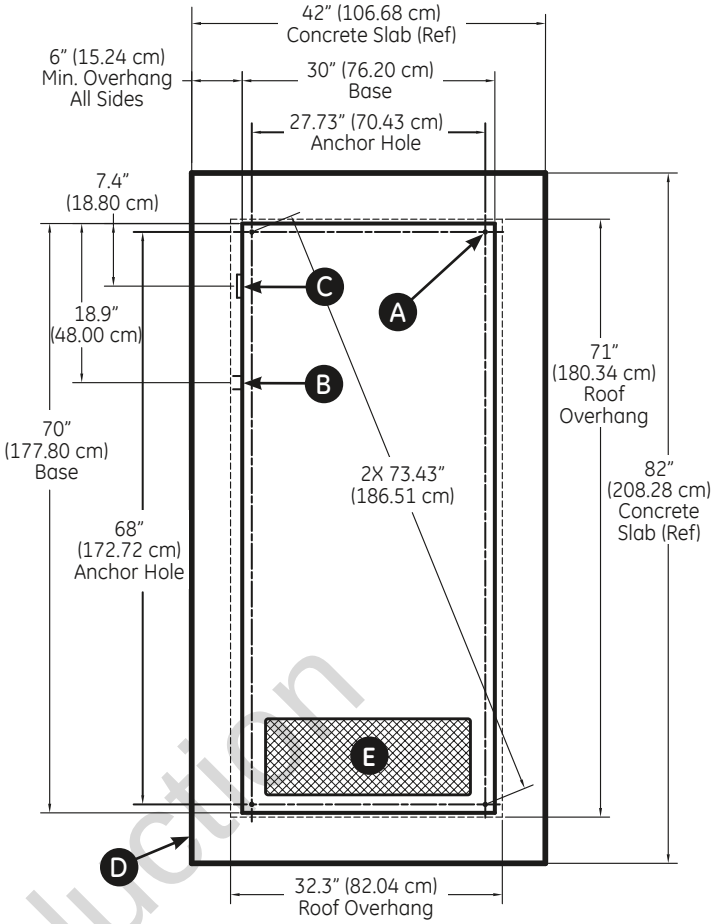

Not for Reproduction

Electrical and Fuel Inlet Locations

Electrical and Fuel Inlet Locations

The 3/4 inch N.P.T. fuel inlet connector **B** and 2 inch electrical inlet location **C** is shown.

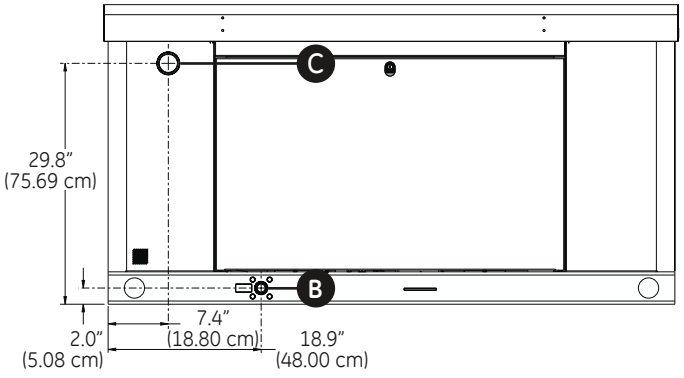

Lifting the Generator

The generator weighs approximately 1,086 pounds (493 kg). Proper tools, equipment and qualified personnel should be used in all phases of handling and moving the generator.

⚠ WARNING Hazardous Voltage - Contact with power lines could cause electric shock or burn, resulting in death or serious injury.

Lifting Hazard / Heavy Object - Could result in serious injury.

- If lifting or hoisting equipment is used, DO NOT contact any power lines.
- DO NOT lift or move generator without assistance.
- Use lifting pipes as described in *Lifting the Generator*.
- DO NOT lift unit by roof as damage to generator will occur.

Two 60" (1.5m) lengths of 2" Schedule 40 pipe (A), supplied by the installer, are required to lift the generator onto cement pad. Insert pipes through the lifting holes (B) located near the unit's base. Use a spreader bar to ensure that the chains, straps or cables DO NOT touch the generator's roof. Hooks may be used in the lifting holes in place of the pipe in accordance with OSHA or local lifting regulations. Retouch any chipped paint with supplied touch-up paint.

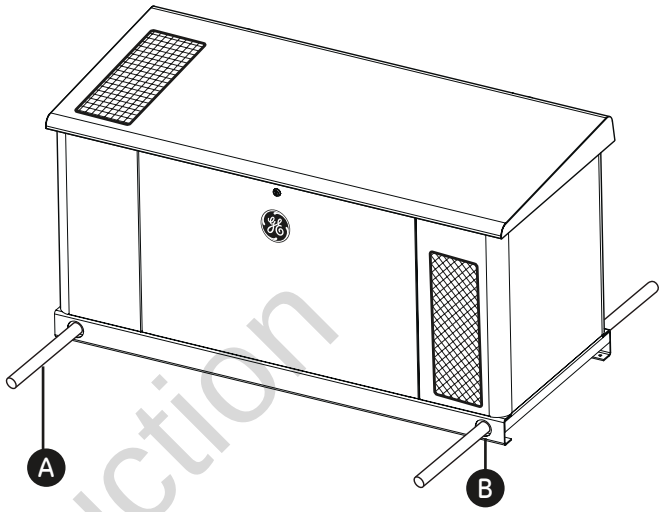

Not for Reproduction

Access Ports

The generator is equipped with an enclosure that has several access panels, as shown.

The access panels and the components located behind them are listed below:

- A-Roof (Control Panel, internal guard)
- B-Front Access Panel (oil drain and oil filter)
- C-Internal Guard (air filter, oil dipstick, coolant bottle)
- D-Rear Access Panel (fuel regulator, fuel selector, and engine starter)
- E-Control Panel Cover (field wiring and control wires)

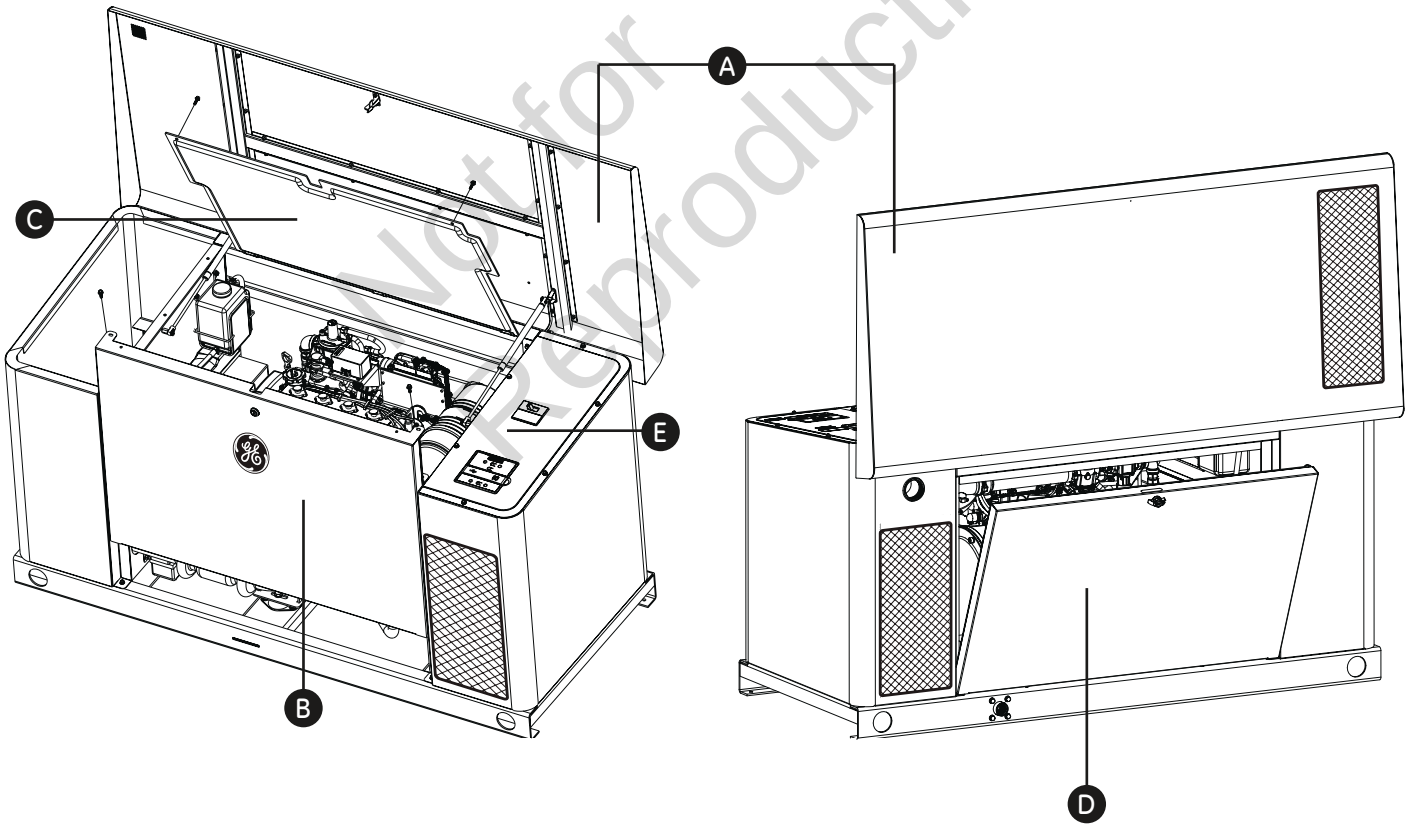

Not for Reproduction

Each generator is shipped with a set of identical keys. These keys fit in the lock on the front and rear removable panels. The roof must be unlocked in order for it to open.

To open roof:

1. Insert key into lock (A) of front panel. Gently push down on roof above the lock to aid in turning the key. Turn key one quarter turn clockwise.

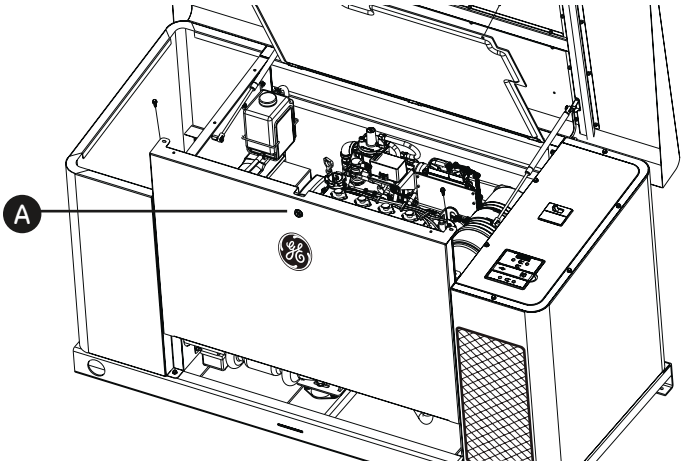

2. Lift roof to the open position.

To open internal guard:

1. Ensure the roof is in the open position.
2. Remove the two bolts (B) that secure the internal guard to the unit.

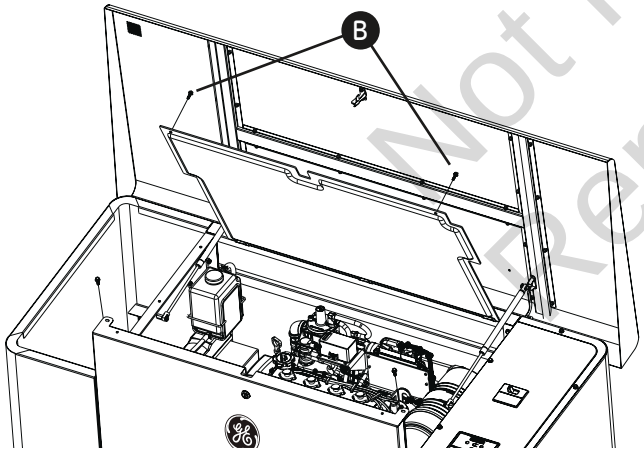

3. Lift up on panel and secure with tab on roof latch.

To secure internal guard:

1. Move holding tab on roof latch to release the panel, then lower the panel into place.
2. Secure the panel with two bolts.

To remove front panel:

1. Remove the two bolts (C) that secure the panel to the unit.

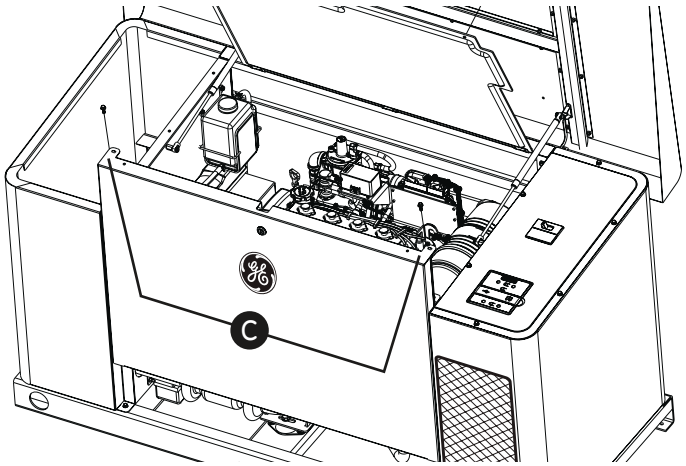

2. Lift panel to remove from unit.

To secure front panel:

1. Place panel in unit.
2. Secure the panel with two bolts.

To remove rear panel:

1. Insert key into lock (D) of rear panel. Turn key one quarter turn counterclockwise to unlatch.

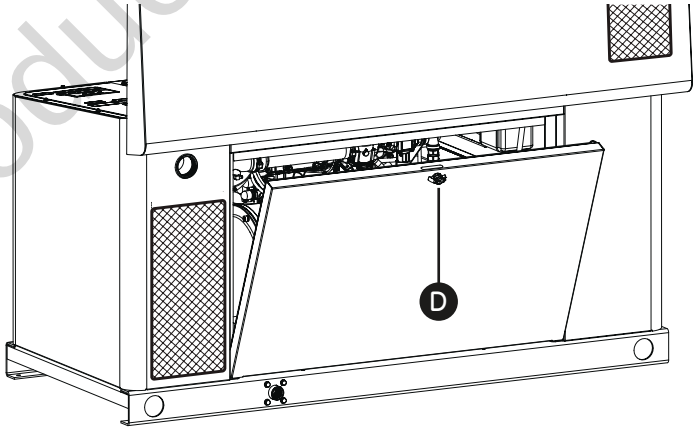

2. Open panel so that it clears the hinges.
3. Lift panel to remove from unit.

To secure rear panel:

1. Slide panel into place on unit.
2. Secure the panel with keyed lock (turn clockwise to latch).

Not for Reproduction

The Gaseous Fuel System

The information below is provided to assist gaseous fuel system technicians in planning installations. In no way should this information be interpreted to conflict with applicable fuel gas codes. Consult with your local fuel supplier or Fire Marshall if questions or problems arise.

⚠ WARNING Propane and Natural Gas are extremely flammable and explosive, which could cause burns, fire or explosion resulting in death or serious injury.

- LP gas is heavier than air and will settle in low areas.
- Natural gas is lighter than air and will collect in high areas.
- The slightest spark could ignite these fuels and cause an explosion.
- DO NOT light a cigarette or smoke.

TO THE INSTALLER: Consult with the generator owner(s) and convey any technical considerations that might affect their installation plans before applying these general guidelines.

NOTICE The supplied flexible gaseous pipe is not to be installed underground or in contact with the ground.

- The entire flexible gaseous pipe must be visible for periodic inspection and must not be concealed within nor contact nor run through any wall, floor, or partition.

The following general rules apply to gaseous fuel system piping:

- The piping should be of a material that conforms to federal and local codes, rigidly mounted and protected against vibration.
- Piping should be protected from physical damage where it passes through flower beds, shrub beds, and other cultivated areas where damage could occur.
- Install the flexible, gaseous hose B (supplied) between the generator Fuel Inlet port A and rigid piping to prevent thermal expansion or contraction from causing excessive stress on the piping material.
- A union C or flanged connection shall be provided downstream to permit removal of controls.
- A manometer port should be provided D. A digital manometer, P/N 19495, is available at your Briggs & Stratton service center. When the initial test runs are complete, the manometer is removed and the port is plugged. The manometer port permits temporary installation of a manometer to ensure that the engine receives the correct fuel pressure to operate efficiently throughout its operating range.
- Where the formation of hydrates or ice is known to occur, piping should be protected against freezing. The termination of hard piping should include a sediment trap E where condensate is not likely to freeze.
- A minimum of one accessible, approved manual shutoff valve F shall be installed in the fuel supply line within 6 ft (1.8 m) of the generator.
- A minimum 10 ft. (3 m) section of gas pipe between the primary fuel regulator and the generator fuel inlet connection (acts as accumulator for high block loads).
- A manual fuel shut-off valve located in the interior of the building.
- Where local conditions include earthquake, tornado, unstable ground, or flood hazards, special consideration shall be given to increase strength and flexibility of piping supports and connections.
- Piping must be of the correct size to maintain the required supply pressures and volume flow under varying generator load conditions with all gas appliances connected to the fuel system turned on and operating.
- Use a pipe sealant or joint compound approved for use with NG/LPG on all threaded fittings to reduce the possibility of leakage.
- Installed piping must be properly purged and leak tested, in accordance with applicable codes and standards.

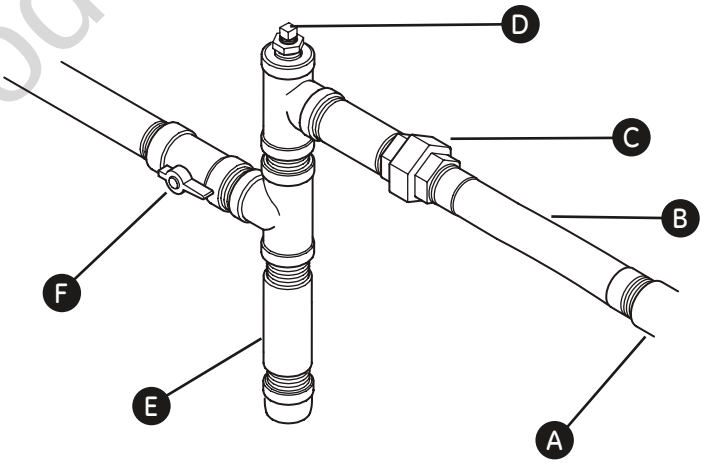

A Generator Fuel Inlet
B Flexible Fuel Hose
C Union Fitting
D Manometer Test Port
E Sediment Trap
F Manual Shut-off Valve

Not for Reproduction

Fuel Conversion

The engine of your generator system is factory calibrated to run on natural gas (NG) or on liquefied propane (LP) vapor. To convert to either fuel, follow these steps:

NOTICE Units are set to NG at the factory.

1. Insert key into lock of front panel. Gently push down on roof above the lock to aid in turning the key. Turn key one quarter turn clockwise.
2. Lift roof to the open position.
3. Press the control board **OFF** button.
4. Remove 15 Amp fuse from control panel.
5. Lift service panel.
6. Remove the two bolts that secure the front panel to the unit. Lift panel to remove from unit.
7. Disconnect the battery cable indicated by a **Negative** (**NEG** or **-**).
8. Remove the rear panel.
9. Locate the fuel selector collar on bottom of fuel regulator (A)
10. Carefully push up on fuel selector collar, twist either right or left and slide through the groove of the appropriate fuel type (NG or LP).
    - Pull down lightly to ensure fuel selector collar is seated.
    - Locate fuel selector switch on side of circuit breaker enclosure.

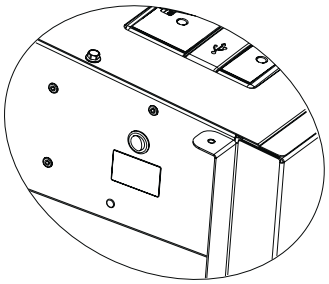

    - Set switch to appropriate fuel type.
11. Reinstall the rear panel.
12. Reconnect the battery cable indicated by a **Negative** (**NEG** or **-**).
13. Place front panel in unit. Secure the panel with two bolts.
14. Lower service panel.
15. Reinstall 15 Amp fuse in control panel.
16. Press the control board **AUTO** button.
17. Lower roof to the closed position.
18. Insert key into lock of front panel. Gently push down on roof above the lock to aid in turning the key. Turn key one quarter turn counterclockwise.

Not for Reproduction

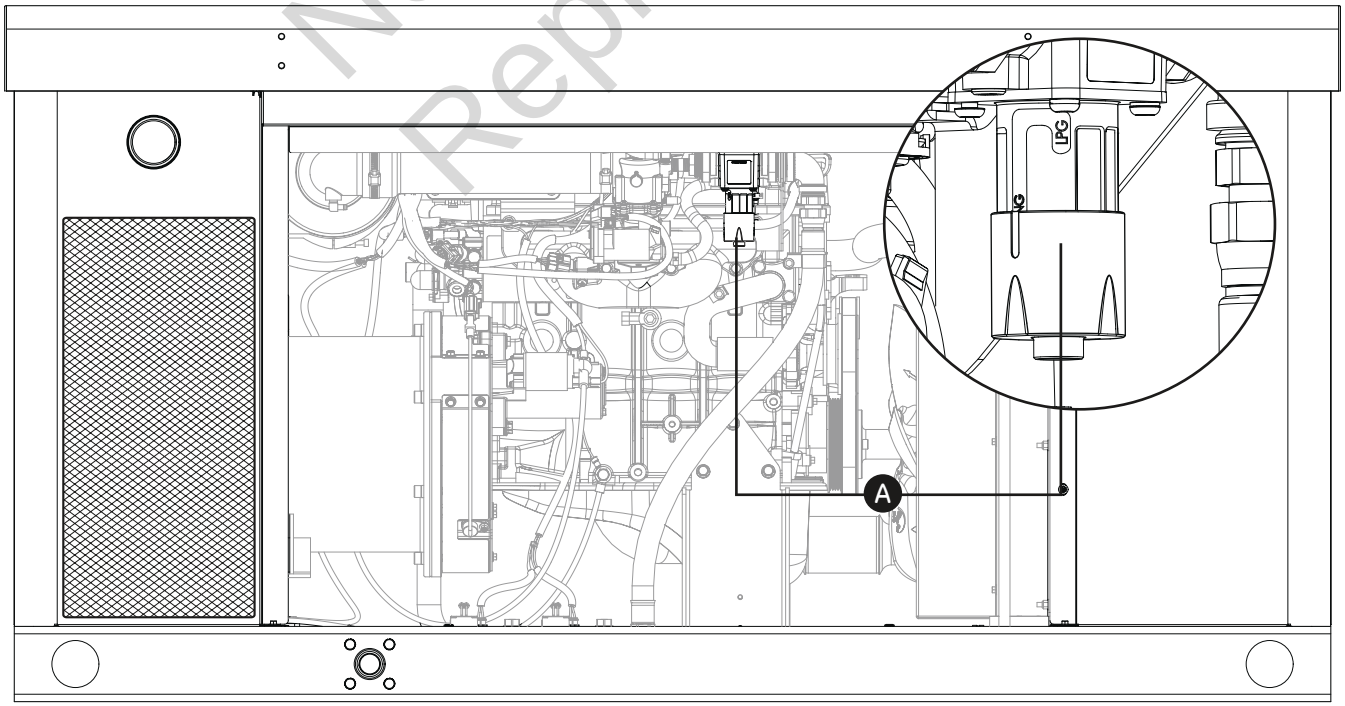

Fuel Consumption

Estimated fuel supply requirements for natural gas and LP vapor fuels are shown here.

LP Vapor (Propane)

	30 kW	
Full Load	BTU/Hr	436800
	Cu Ft/Hr	175
	m³/Hr	5.0
	Gal/Hr (liquid)	4.9
1/2 Load	BTU/Hr	287400
	Cu Ft/Hr	115
	m³/Hr	3.3
	Gal/Hr (liquid)	***3.2***
Exercise	BTU/Hr	138000
	Cu Ft/Hr	55
	m³/Hr	1.6
	Gal/Hr (liquid)	***1.5***

Natural Gas

	30 kW	
Full Load	BTU / Hr	414500
	Cu Ft/ Hr	415
	m³/Hr	11.7
1/2 Load	BTU / Hr	275400
	Cu Ft/ Hr	275
	m³/Hr	7.8
Exercise	BTU / Hr	136200
	Cu Ft/ Hr	136
	m³/Hr	3.9

Fuel Pressure

Both LP vapor and natural gas fuel supply pressure at the generator's fuel inlet port should be between 5 to 11 inches (13 to 28 cm) of water (in. W.C.) at full load with all gas appliances turned on and operating. Maximum pressure with engine OFF at No Load is 13.85 in. W.C.

Power Loss

Air density is less at high altitudes, resulting in less available engine power. Specifically, engine power will decrease 3% for each 1,000 feet (300 m) above sea level and 1% for each 10° F (5.6°C) above 77°F (25°C). Generators located in these conditions, that use power management technology must have their transfer switch programmed appropriately for this power decrease.

Fuel Pipe Sizing

There are numerous on-line or otherwise-published references for fuel pipe sizing. For example, NFPA 54 - National Fuel Gas Code, 2006 (Item #: 320-6031-06) is a common resource. The installer should consider the specific gravity of gas, compensate for a nominal amount of restriction from bends and fittings, and refer to federal and local codes for guidance.

Not for Reproduction

System Connectors

Low Voltage connections to signal fault contacts and for transfer switch communication are made via a field connection terminal block in control board area. Compare this illustration with your generator to familiarize yourself with the location of these connections.

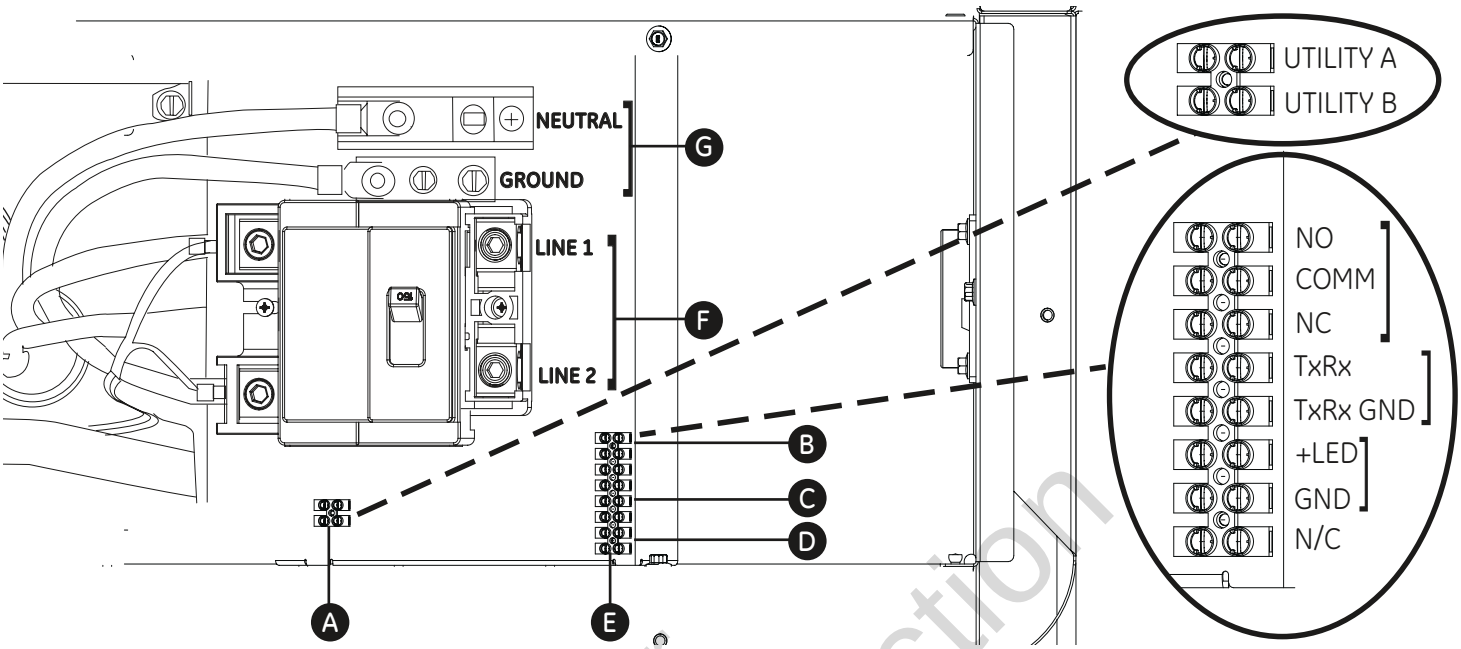

A - Two Pin Terminal Block — Used to connect utility 240 VAC from fuse block in ATS to the control board. Connect only one wire per terminal.

B - Fault Contacts — Use NO, COM and NC to hook up a siren, light, etc. to alert you in case of a fault. Contacts reverse state (NO goes to NC and vice versa) upon a fault condition.

C - Transfer Switch Communication (TxRx and TxRx GND) — Connect to transfer switch control board for communication interface using 18AWG twisted pair wire.

D - +LED and GND Connection — Not required for included wireless monitor. Available for optional hardwired remote system status panel accessory, #6154.

E - Eight Pin Terminal Block — Used to connect signal wires to the control board. Connect only one wire per terminal.

F - Power Connection (Line 1 and Line 2) — Power connection to transfer switch.

G - Neutral and Ground Connection — Connect to transfer switch neutral and ground

Not for Reproduction

- For power output connection (Line 1, Line 2, Neutral, and Ground), refer to the following table:

	30 kW
Power output connections minimum 300V, 75°C	1/0 Copper
	3/0 Aluminum

- Reference NEC 2011 table 310.15 (B) (16)
- Use National Electrical Code for correction factors and wire size calculations.
- For utility circuit connection (Utility A and Utility B) use #14 AWG minimum 300 volt wire.
- For transfer switch communication use #18 AWG twisted pair conductors, no greater than 200 ft in length, 300 volt wire.
- When connecting to the terminal block, fasten only one wire to each connector screw.
- Torque terminal block screws to 4.4 in-lb (0.49 Newton meter).
- Torque circuit breaker connections to 45 in-lb (5 Newton meter).

Generator AC Connection System

A single-phase, three-wire AC connection system is used in the generator. The stator assembly consists of a pair of stationary windings with two leads brought out of each winding. The junction of leads 22 and 33 forms the neutral lead, as shown schematically and as wiring diagram. A complete schematic and wiring diagram can be found later in this manual.

Neutral is not bonded to ground at generator.

When making connections, obey wire type and torque specifications shown on the circuit breaker and neutral/ ground connector.

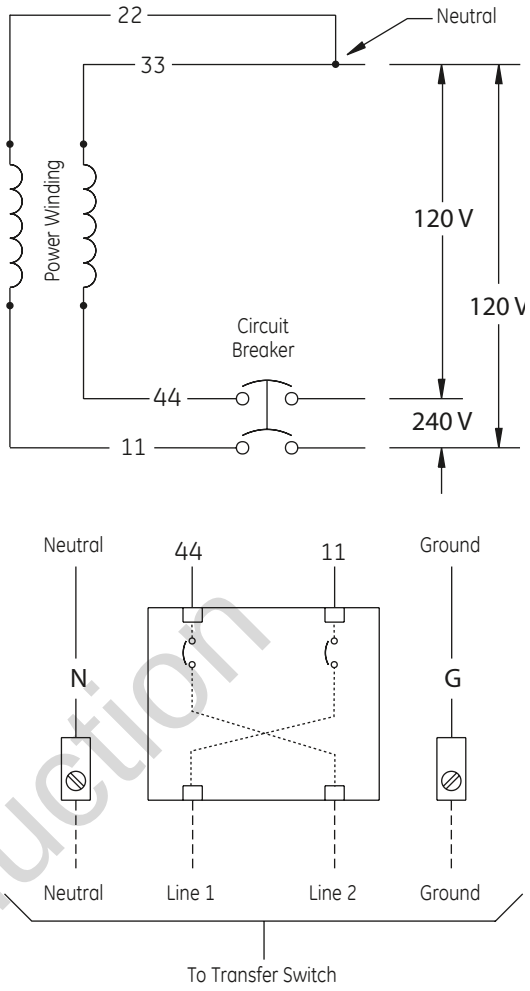

Not for Reproduction

Grounding the Generator

The generator must be installed as part of a system that includes a listed transfer switch, with neutral to ground bonding at the transfer switch in accordance with installation instructions. Unless mandated by local code, additional grounding to earth at the generator is not required. Any grounding at generator must use metal piercing lock washers (or equal), UL listed terminals installed per terminal supplier's instructions, and comply with national electrical codes and local requirements.

Utility Circuit Connection

"240V Utility" leads must be routed in conduit. The "240V Utility" leads deliver power to the generator's circuit board and optional water heater. This power also charges the battery. When power on these leads is lost, the generator will start.

Using installer-supplied #14 AWG minimum 300 volt 75°C-90°C wire †, connect the two-pin terminal **A** in the control panel box to the fuse terminals **B** in the automatic transfer switch.

† Use National electric code for correction factors and wire size calculations.

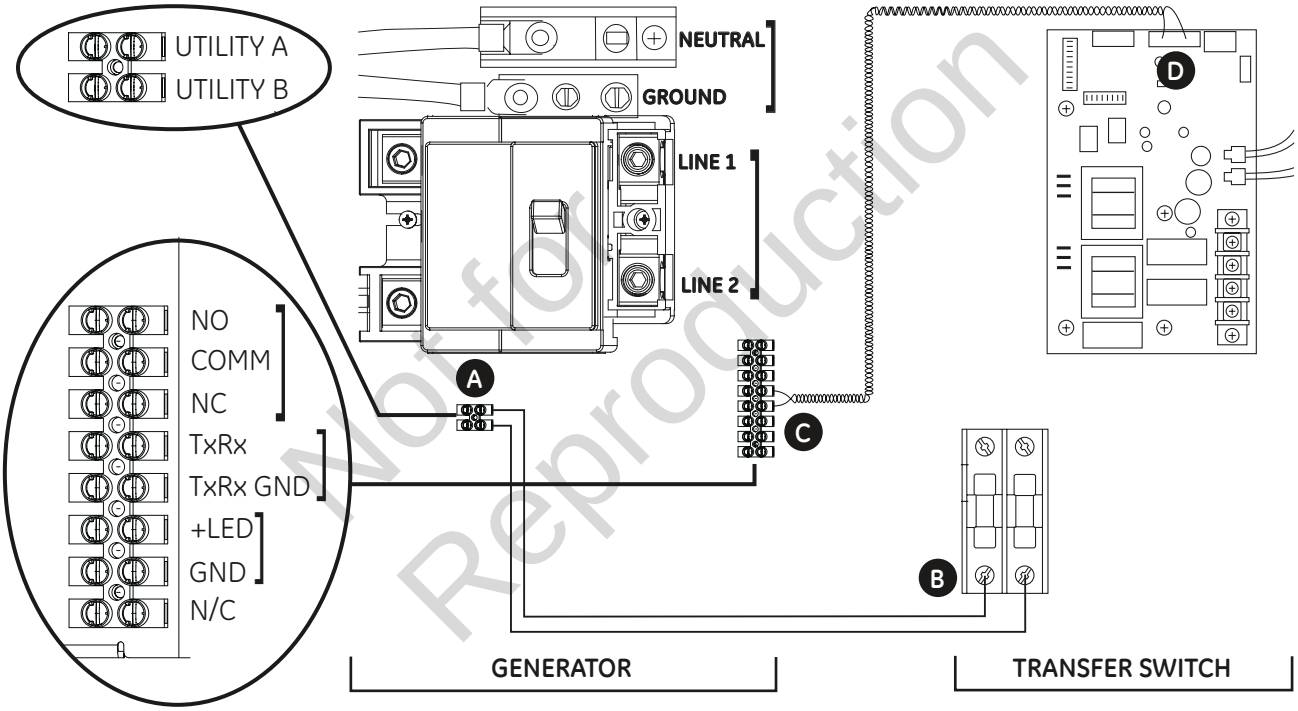

Not for Reproduction

Transfer Switch Communication

Using installer supplied #18 AWG twisted pair conductors, no greater than 200 ft in length, connect Tx Rx and Tx Rx GND from the generator terminal block **C** to T/R and GND on the transfer switch control board **D**.

Service Code Detection System

The generator may have to run for long periods of time with no operator present. For that reason, the system is equipped with sensors that automatically shut down the generator in the event of potentially damaging conditions, such as low oil pressure, high temperature, over speed, and other conditions. Refer to *Service Code Detection System* in the operator's manual for more detailed information.

System Control Panel

The generator control board, located inside the generator, under the roof, is shown below. Brief descriptions of the controls used during installation are:

A - Menu/Programming Navigation Buttons — See *Menu* section for details

B - Mini USB Port — Authorized Dealer Service Use Only

C - Generator Operation Control Buttons —

- "**AUTO**" Normal operating position. Press and hold button to put unit into Automatic mode. If an utility power outage is sensed, the system will start the generator. When utility power is restored, **AUTO** lets the engine stabilize internal temperatures, shuts off the generator, and waits for the next utility outage.
- "**OFF**" Turns off running generator, prevents unit from starting, and resets any detected faults.

OFF must be pressed and held for more than 5 seconds in order to reset service codes.

- "**MANUAL**" Used to manually start the generator.

*** - "AUTO" LED** — LED will light when unit is placed into **AUTO** mode. LED will blink if exercise cycle is not set or set to OFF.

D – 15 Amp Fuse — Protects the generator DC control circuits. If the fuse has 'blown' (melted open) or was removed, the engine cannot crank or start. Replace the fuse using only an identical ATO 15A fuse. One spare fuse is supplied with the unit.

E - Cover — This protective cover must be opened to access the fuse and the USB port.

F - Digital Display — Displays generator mode, menu options, service codes, and service engine indicators

More information may be found in *Controls* in the operator's manual.

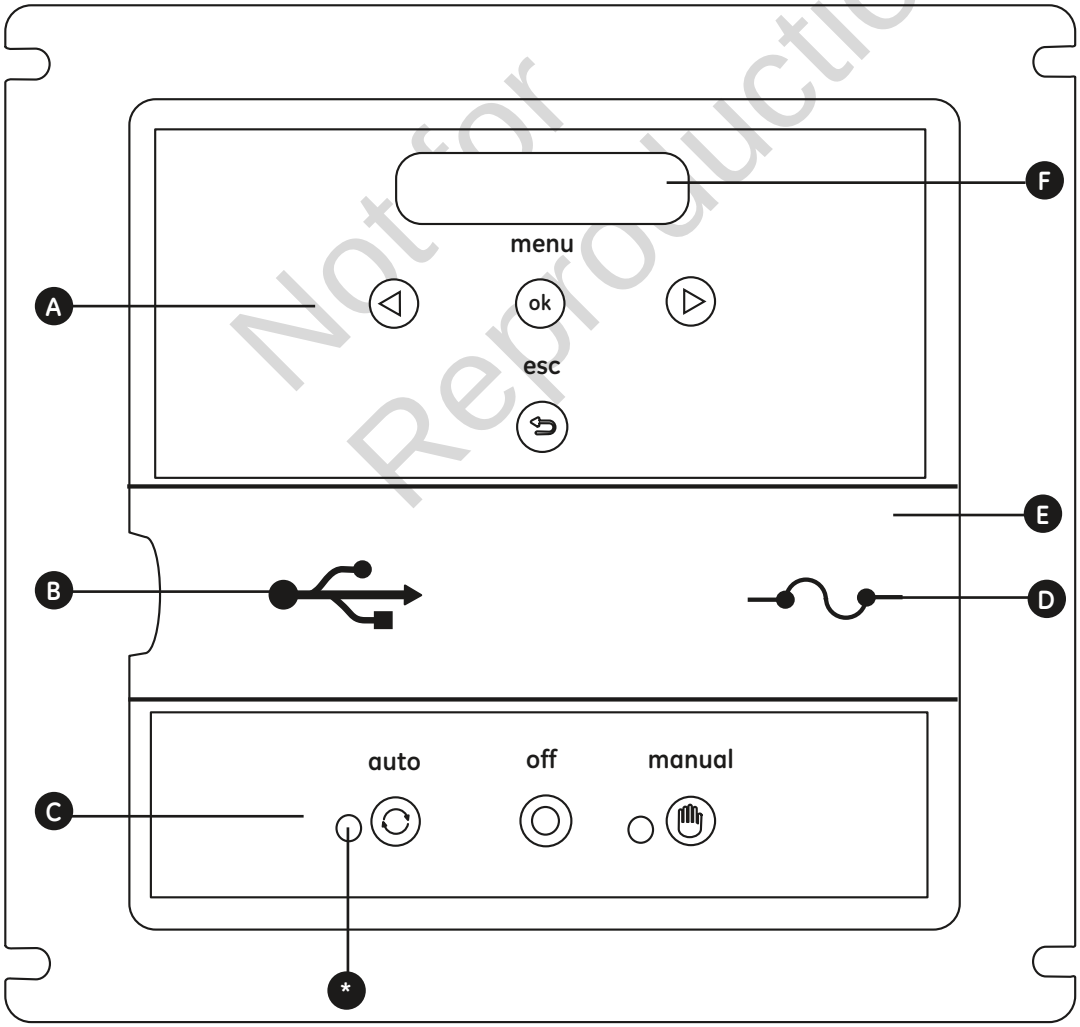

Not for Reproduction

Menu

The following chart shows the icons for the buttons that control the system control panel.

ok	**MENU**	ENTER THE MENU (VIEW SETTINGS) PRESS TO CONFIRM SELECTION WHEN PROGRAMMING.
	ESCAPE (EXIT)	RETURN TO LAST MENU ITEM
	RIGHT ARROW	TOGGLE THROUGH MENU OPTIONS SETTING SYSTEM PARAMETERS
	LEFT ARROW	TOGGLE THROUGH MENU OPTIONS SETTING SYSTEM PARAMETERS
	MANUAL MODE	USED TO MANUALLY START THE GENERATOR. PRESS AND HOLD BUTTON TO START THE GENERATOR.
	OFF	TURNS OFF RUNNING GENERATOR, PREVENTS UNIT FROM STARTING, AND RESETS ANY DETECTED FAULTS.
	AUTOMATIC MODE	NORMAL OPERATING POSITION. PRESS AND HOLD BUTTON TO PUT UNIT INTO AUTOMATIC MODE. IF A UTILITY POWER OUTAGE IS SENSED, THE SYSTEM WILL START THE GENERATOR. WHEN UTILITY POWER IS RESTORED, AUTO LETS THE ENGINE STABILIZE INTERNAL TEMPERATURES, SHUTS OFF THE GENERATOR, AND WAITS FOR THE NEXT UTILITY POWER OUTAGE.

Not for Reproduction

The following chart describes key sequences for accessing different programming modes;

	GENERAL SET-UP	PRESS AND HOLD **[ARROW LEFT AND ARROW RIGHT]** FOR THREE SECONDS TO ENTER THE PROGRAM MODE.
	ADVANCED SETTINGS	PRESS AND HOLD **[ARROW LEFT, ARROW RIGHT AND ESC]** FOR THREE SECONDS TO ENTER THE ADVANCED SETTINGS MODE.
ok	**WIRELESS LINK MODE**	PRESS AND HOLD **[MENU AND ESC]** FOR THREE SECONDS TO ENTER THE WIRELESS LINKING MODE.

General Set Up Screen

For general set up, press and hold the left arrow and right arrow ◁ ▷ for 3 seconds. Follow the prompts as outlined below.

NOTE: Date and Time were set at the factory and stored in the control panel memory. The Exercise Cycle was also set at the factory. The default exercise cycle occurs on Tuesdays, at 2:00 P.M. Central Standard Time. To update or change these settings, follow the steps below.

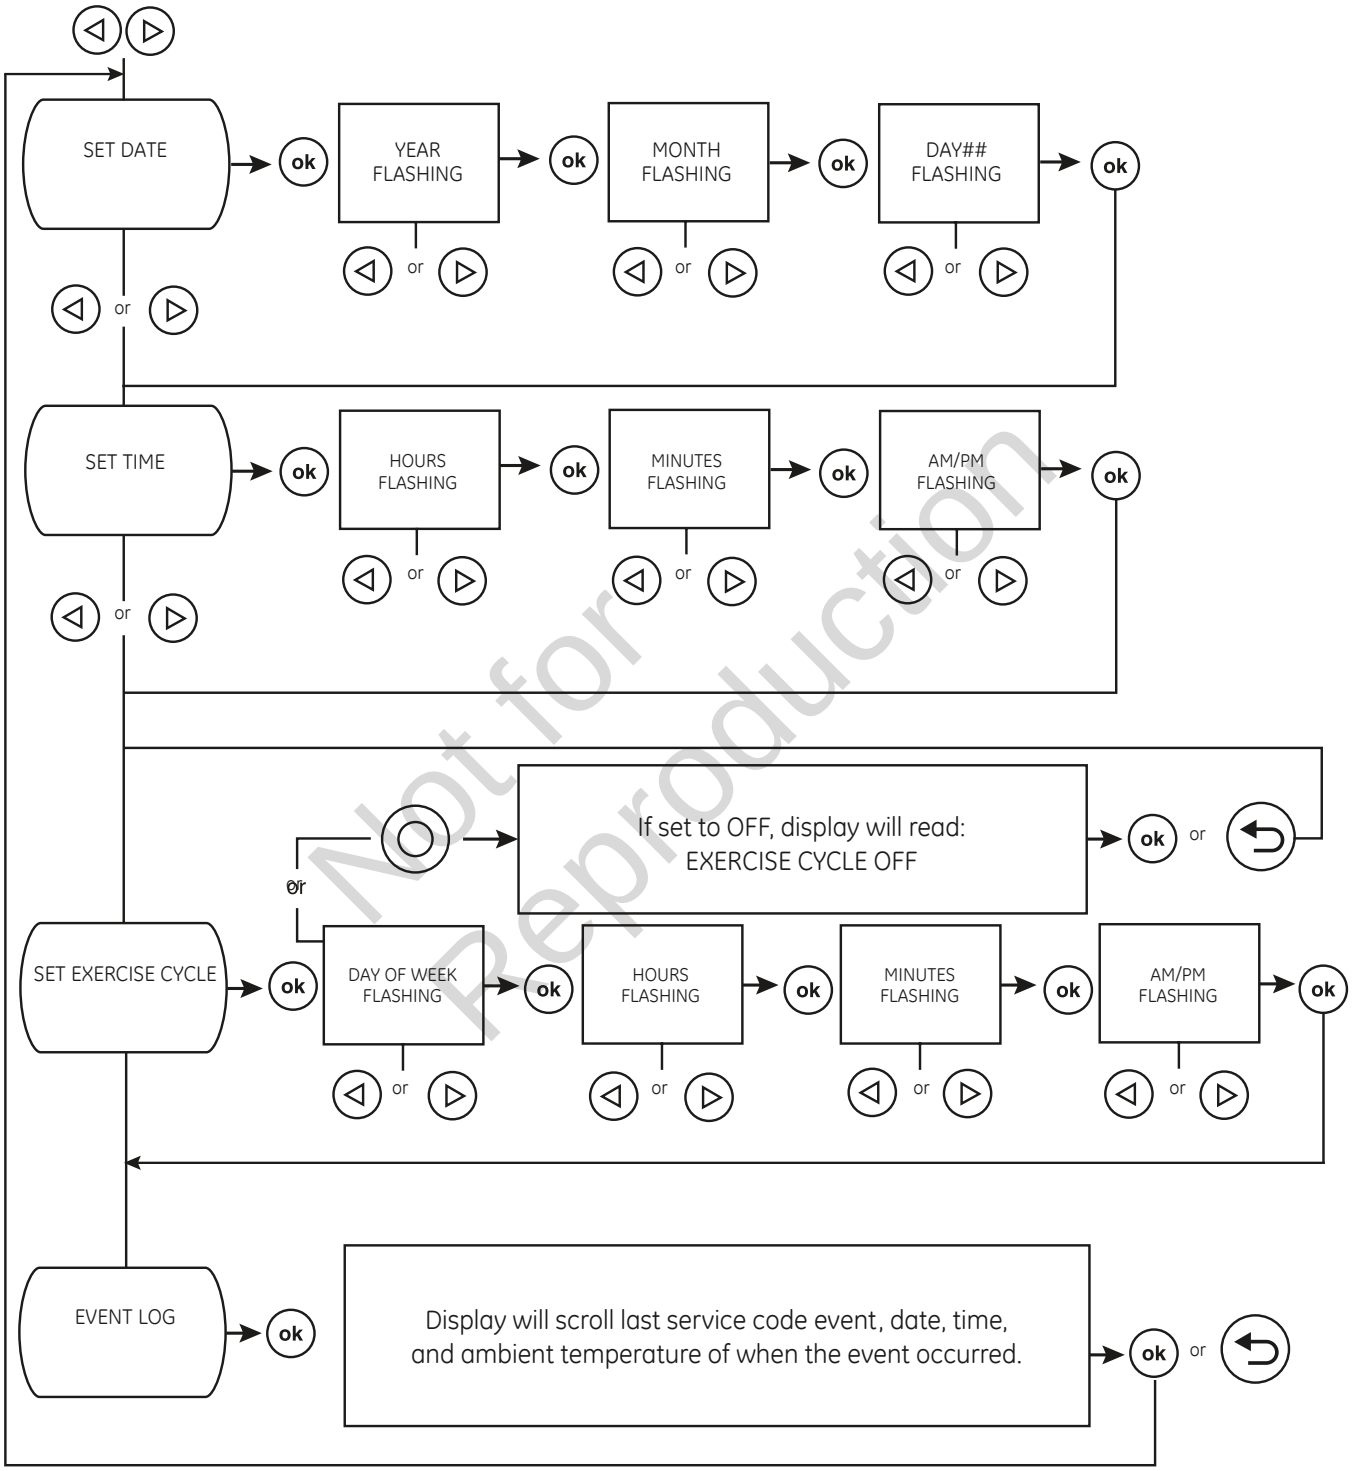

Not for Reproduction

IF DURING PROGRAMMING NO BUTTONS ARE PRESSED FOR 30 SECONDS, THE CONTROL PANEL WILL AUTOMATICALLY EXIT THE PROGRAM MODE.

Control Panel Prompts

Automatic Mode

In Automatic Mode, the display screen will display via scrolling text:

- Generating set READY - if the unit is in standby and utility power is present.
- Generating set ON - if the unit is running and utility power is not present.
- SERVICE CODE - if a system fault has been detected.

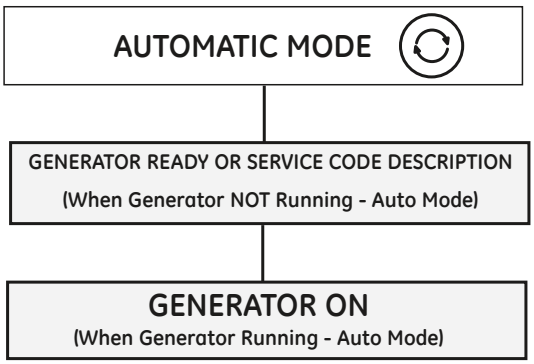
AUTOMATIC MODE
GENERATOR READY OR SERVICE CODE DESCRIPTION
(When Generator NOT Running - Auto Mode)
GENERATOR ON
(When Generator Running - Auto Mode)

General System Parameters

To view general system parameters, press the MENU button.

The following will scroll across the digital display and then move to the next item:

- Run time
- Date
- Time
- Exercise Cycle date and start time

The user can press the LEFT ARROW or RIGHT ARROW at any time to move to the next item.

The user can press ESCAPE to go back to Generating set READY.

If no user inputs are made for 10 seconds after all the items have been displayed, the control board will reset to

Generating set READY.

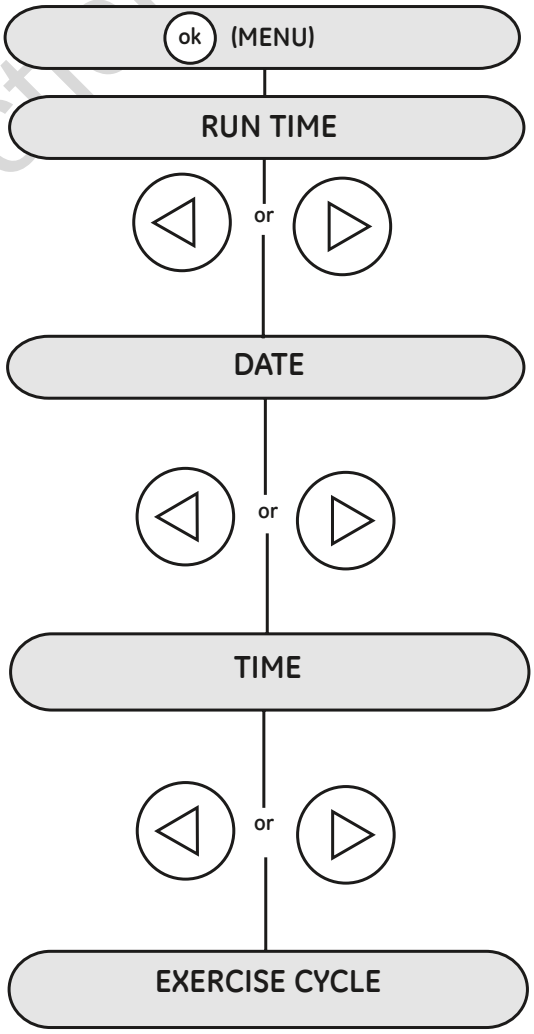

Not for Reproduction

Advanced Settings Screen

Advanced setting parameters are preset at the factory for a typical installation. To view Advanced Settings items and/or to change items, follow the instructions listed below.

NOTICE Advanced settings are critical to the operation of the unit. Careful consideration should be taken when working in the Advanced Settings menu. Exercise caution when selecting and verifying parameters for the generating set and region where the generating set is being operated. Confirm all settings before operating the generating set for the first time.

For advanced menu items, press and hold the left arrow, right arrow, and escape key ◁ ⮌ ▷ for 3 seconds. Follow the prompts as outlined below.

NOTICE In the Advanced Setting menu, a three button access code (left arrow, right arrow, and escape key ◁ ⮌ ▷)must be pressed once to enter the menu and again to change any setting. After each confirmation of a setting, the selection will display solid for 2 seconds before moving to the next program item.

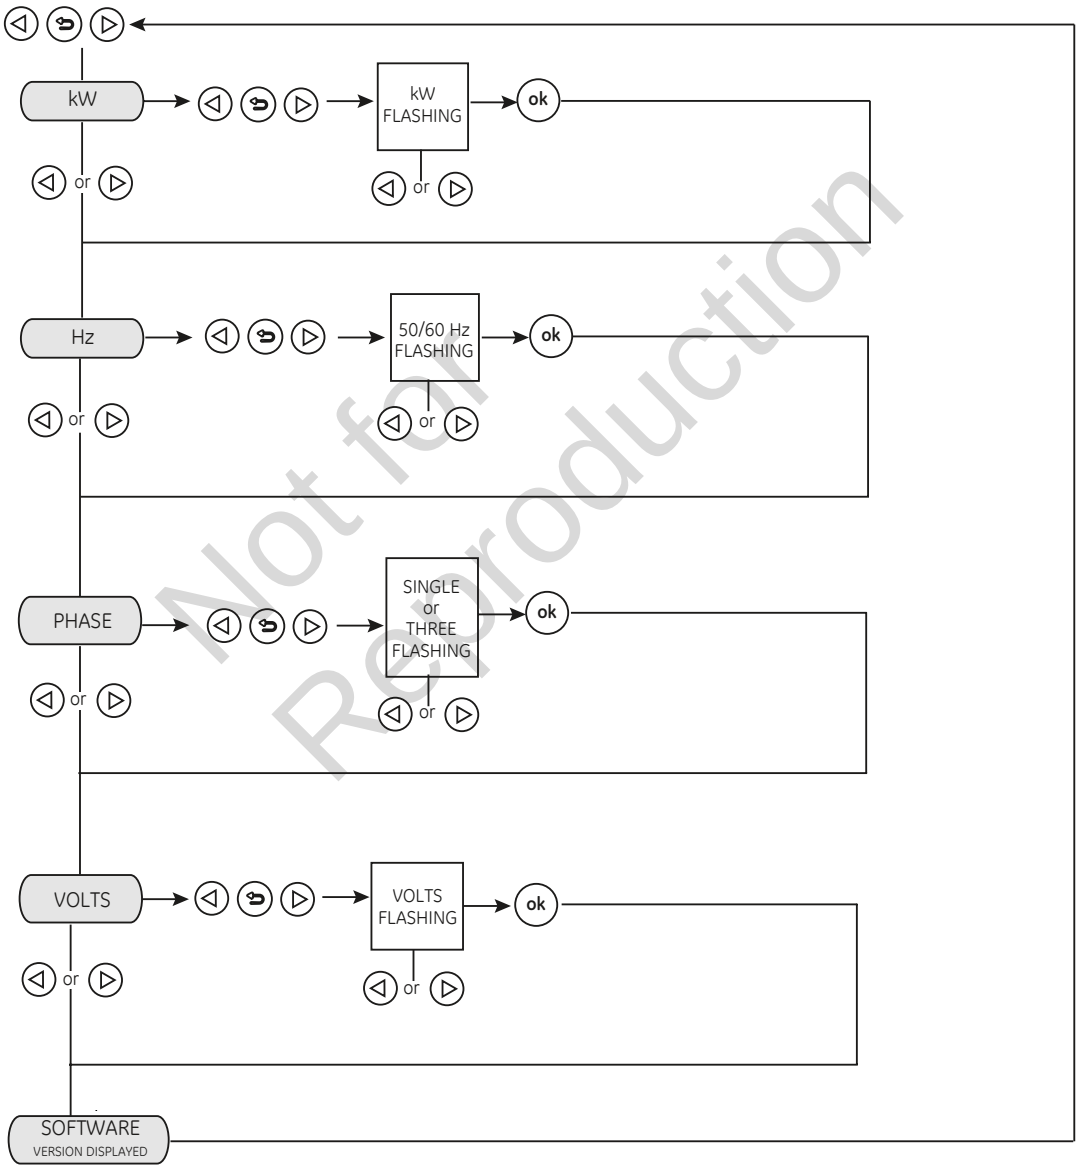

Not for Reproduction

Final Installation Considerations

Engine Oil

NOTICE Any attempt to crank or start the engine before it has been properly serviced with the recommended coolant or oil will result in equipment failure.

- Refer to *Maintenance* in the operator's manual for coolant and oil fill information.
- Damage to equipment resulting from failure to follow this instruction will void engine and generator warranty.

The engine is shipped from the factory pre-run and filled with synthetic oil (API SJ/CF 5W-30). This allows for system operation in a wide range of temperature and climate conditions. Before starting the engine, check oil level and ensure that engine is serviced as described in the operator's manual.

Coolant System

The engine is shipped from the factory filled with a 50/50 mix of automotive ethylene-glycol anti-freeze and water. This will provide optimum year round protection against freezing, boiling and corrosion. The coolant system incorporates an optional water heater that operates when ambient temperature is below 80ºF AND utility power is present at the transfer switch. Periodically check coolant level as described in the operator's manual.

Battery

The installer must supply and install a valve-regulated rechargeable starting battery. The starting battery MUST conform to the specifications shown in this chart.

Battery Specifications	Standard
Volts	12 Volt DC
Amps (Min)	540 CCA (cold cranking amps)
Construction	Wet lead acid
Terminal Type	Top post type battery
Dimensions (MAX)	BCI size 26R

Install the battery as described in *Servicing the Battery* in the *Maintenance* section of the operator's manual. Always make sure the **NEGATIVE** cable is connected last.

⚠ **WARNING** Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

⚠ **WARNING** Storage batteries give off explosive hydrogen gas during recharging.

Slightest spark will ignite hydrogen and cause explosion, resulting in death or serious injury.

Battery electrolyte fluid contains acid and is extremely caustic. Contact with battery contents could cause severe chemical burns. A battery presents a risk of electrical shock and high short circuit current.

- DO NOT dispose of battery in a fire. Recycle battery.
- DO NOT allow any open flame, spark, heat, or lit cigarette during and for several minutes after charging a battery.
- DO NOT open or mutilate the battery.
- Wear protective goggles, rubber apron, rubber boots and rubber gloves.
- Remove watches, rings, or other metal objects.
- Use tools having insulated handles.

Not for Reproduction

Fuel Supply System

Ensure that all fuel pipe connections are tight, secure and without leaks.

Ensure that all gas line shutoff valves are OPEN and that adequate fuel pressure is available whenever automatic operation is desired.

Initial Start-up (No Load)

The unit has been set-up for NG operation at the factory. Fuel conversion, if needed, must be completed prior to performing these steps. See Fuel Conversion.

Before operating the generator or placing it into service, inspect the entire installation carefully. Then begin testing the system without any electrical loads connected, as follows:

1. Remove 6 screws (A) that secure control box cover to enclosure to expose unit's circuit breaker.
2. Connect an accurate frequency meter to line side of generator's main circuit breaker.
3. Set generator's main circuit breaker to **ON** (closed) position.
4. Install 15 Amp fuse in control board.
5. Press and hold **MANUAL** button on control board for 3 seconds. Engine will start.

When the generator is started for the very first time, it will require that air in the gaseous fuel lines be purged. This may cause the engine to run roughly for a few minutes.

6. Listen for unusual noises, vibration or other indications of abnormal operation. Check for oil leaks while engine runs.
7. Let engine warm up for about 5 minutes to allow internal temperatures to stabilize.
8. Check generator output at load side of circuit breaker. Voltage should be 238 - 242 Volts, frequency should be 59.0 - 61.0 Hz.
9. Check generator output between one generator connection lug and neutral lug, then between other generator connection lug and neutral lug. In both cases, voltage reading should be between 119 - 121 Volts.
10. If voltage is outside of these limits, the AVR may need adjustment (this is not typical).

    To adjust AVR:

    A. Connect voltmeter as described in step 2 above.

    B. Remove 4 screws securing control panel and carefully lift control panel to expose AVR. (Warning components on control board are live)

    C. While observing voltmeter, adjust alternator voltage Control (B) for 240 volts. DO NOT adjust either of the other alternator controls.

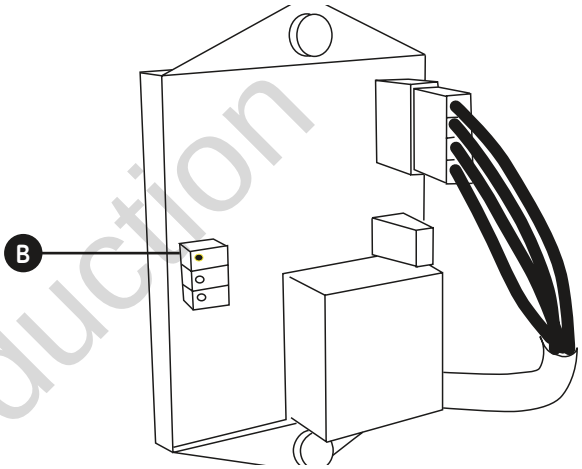

11. Push and hold OFF BUTTON on control board until engine stops.
12. Reinstall control panel with 4 screws.

Not for Reproduction

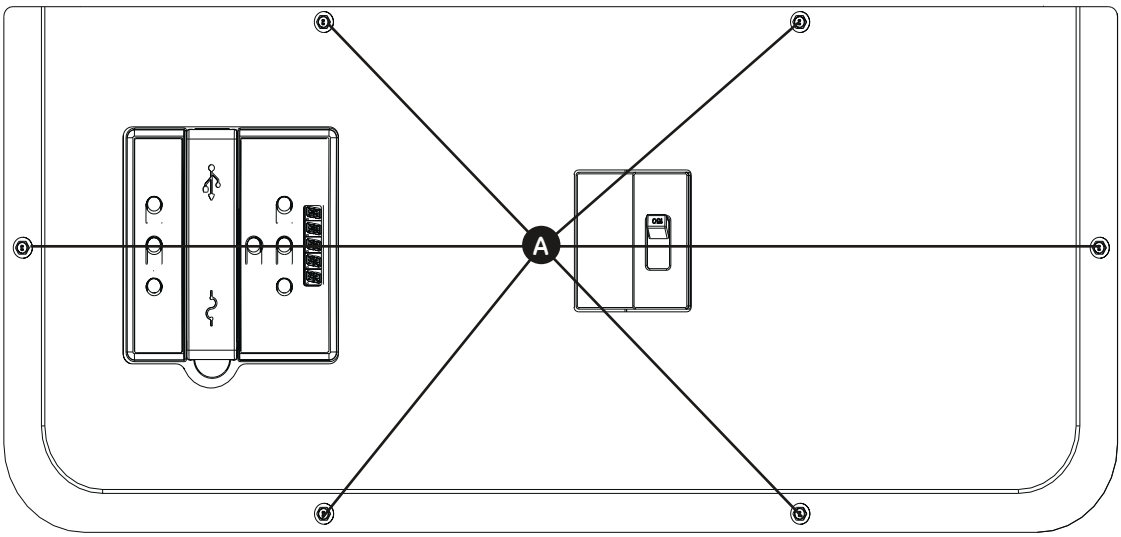

Check to make sure there is adequate fuel flow to the generator.

1. Install a manometer, Briggs and Stratton #19495 or equivalent, in the manometer port.
2. Place generator in AUTO mode by pressing and holding the AUTO button.
3. In the transfer switch, turn off utility power by setting the utility disconnect to OFF.
4. The generator will automatically turn on and the transfer switch will switch to generator power after about 20 seconds.
5. Turn on all gas appliances in the building.
6. Gradually turn on other electric devices in the building until the generator reaches 95% of the electrical output capacity. Verify the electrical output using an amp meter on the generator output wires.
7. Verify that the fuel pressure at the manometer is 5-11" WC. If fuel pressure is incorrect, refer to Pages 19-21 regarding the fuel system.
8. Reinstall control box cover with 6 screws **A**.

The generator is equipped with an exercise timer to ensure that the generator is ready in case of a utility power outage. During the exercise period, the generator runs for approximately 20 minutes, performs a diagnostic check, then shuts down. The exercise cycle occurs weekly and requires setup at installation. Electrical load transfer does not occur during the exercise cycle.

Setting the exercise day and time.

1. Press and hold the left and right arrow buttons simultaneously for 3 seconds to enter the General Set-up program mode.
2. Press the left or right arrows to select the desired day of the week, then press the OK button.
3. Press the left or right arrows to select the desired hour of the day, then press the OK button.
4. Press the left or right arrows to select the desired minute, then press the OK button.
5. Press the left or right arrows to select AM or PM, then press the OK button.
6. In the transfer switch, turn on utility power by setting the utility disconnect to ON.
7. Set the generator disconnect circuit breaker to the ON position.
8. Make sure the 15 Amp fuse is installed in the generator control panel.
9. Set the generator's circuit breaker to the ON position.
10. Confirm that the generator is in AUTO mode.

Not for Reproduction

Operation

Automatic Operation Sequence

The generator's control panel houses a logic control circuit board. This control board constantly monitors utility power source voltage. Should that voltage drop below a preset level, control board action will signal the engine to crank and start.

When utility source voltage is restored above a preset voltage level, the engine is signaled to shut down.

The actual system operation is not adjustable and is sequenced by sensors and timers on the control board, as follows:

Utility Voltage Dropout Sensor

- This sensor monitors utility source voltage.
- If utility source voltage drops below about 70 percent of the nominal supply voltage, the sensor energizes a 10 second timer. The timer is used to 'sense' brown-outs.
- Once the timer has expired, the engine will crank and start.

Utility Voltage Pickup Sensor

This sensor monitors utility power supply voltage. When that voltage is restored above 80 percent of the nominal source voltage, a time delay starts timing and the engine will go to engine cool-down.

Engine Cool-down Timer

- When the load is transferred back to the utility power source, the engine cool-down timer starts timing.
- The timer will run for about one minute, then the generator will stop.
- Minimum engine run time is 5 minutes.

Setting the Exercise Timer

The generator is equipped with an exercise timer. During the exercise period, the unit runs for approximately 20 minutes and then shuts down. Electrical load transfer DOES NOT occur during the exercise cycle (unless an utility power outage occurs).

The generator will only enter the exercise cycle if the unit is in the AUTO mode and this exact procedure is followed.

To set the exercise timer:

NOTICE The generator is set with a default exercise cycle setting of Tuesday at 2:00 PM, Central Time. To change the cycle setting, proceed with the following steps:

1. Choose the day and time you want your generator to exercise.
2. Press and hold the left arrow and right arrow simultaneously for 3 seconds to enter the General Set-Up program mode. See *General Set-Up* flow chart in Menu Section.
3. Verify and/or set the time and date on the unit.
4. Go to the SET EXERCISE prompt and hit the "OK" button.

NOTICE Items will flash until they are selected.

SELECT DAY: Use the left or right arrow to toggle through the days of the week, Once the day is selected, hit the "OK" button.

SELECT HOUR: Use the left or right arrow to toggle through between 1 and 12. Choose the hour of day you want the generator to exercise then hit the "OK" button.

SELECT MINUTE: Use the left of right arrow to toggle between :00 and :59. Choose the minute of the day you want the generator to exercise then hit the "OK" button.

SELECT AM/PM: Use the left of right arrow to toggle between AM and PM. Once chosen, hit the "OK" button.

NOTICE During the weekly exercise cycle, the generator will run for 20 minutes, but it will not supply power to the building. During the exercise cycle, the in-building monitor will continue blinking the GENERATOR READY green LED.

If you want to change the day and time the unit exercises, simply perform the procedure again.

To turn off the generator exercise cycle, go to the OFF selection within the day of the week menu and press OK. The display will then scroll: EXERCISE CYCLE OFF.

Not for Reproduction

Wireless Monitor

The generator is supplied with a battery-powered, wireless monitor.

The monitor communicates wirelessly with the generator control panel. The monitor may be placed in a suitable location in the building. The system has a line-of-sight range of about 200 feet, but this distance will decrease if the signal has to pass through walls or other objects.

The wireless monitor communicates with the generator every 10 minutes and will display the status via LED lights on the front of the monitor.

Compare the illustration below with your monitor to familiarize yourself with these important components.

- Generator Ready **A** - Green LED
- Generator Power **B** - Green LED
- Service Needed **C** - Red LED
- System Update **D** - Press for current system update with generator.
- Service code descriptions **E** - Name and number of flashes are listed on the backside of the wireless monitor.
- Battery Access Cover **F** - Record the dealer name and phone number on the label provided. Once opened, two AA batteries are installed in the compartment **G**.

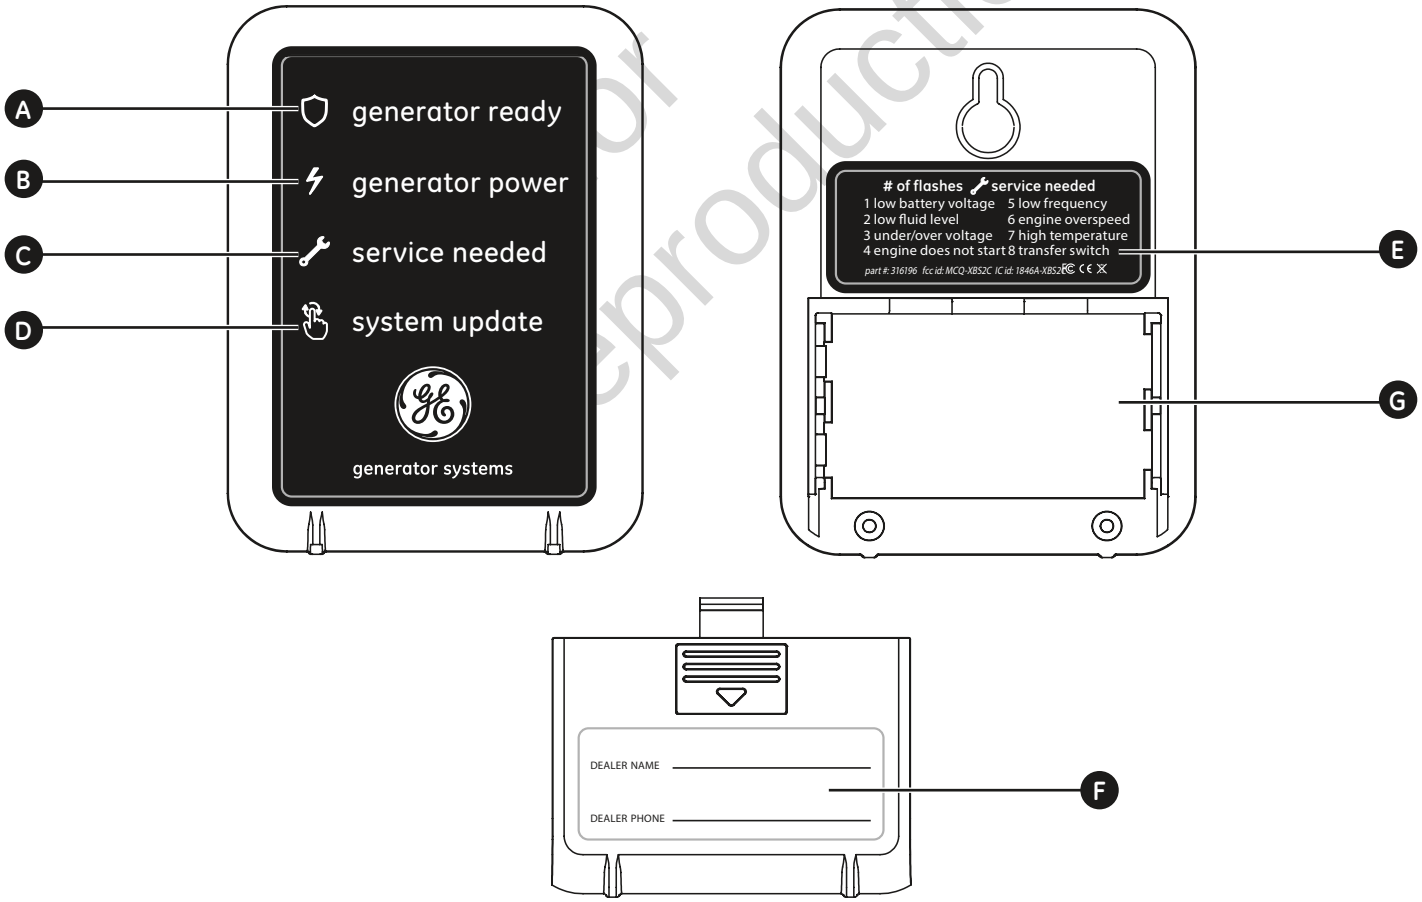

Not for reproduction

Antenna Placement

The wireless monitor includes an antenna, that must be connected during the generator installation process.

1. Lift roof to the open position.
2. Carefully remove tape from roof to insert antenna upright.
3. Secure antenna to roof with the flange nut.

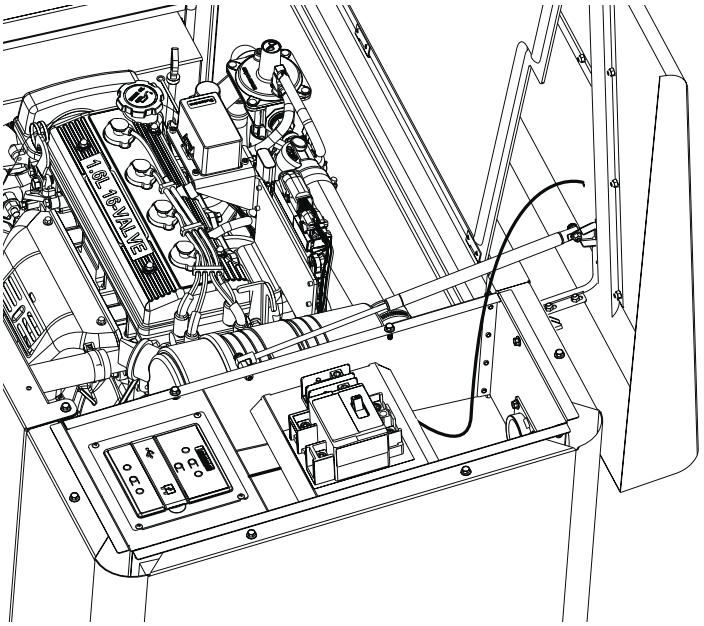

Wireless Monitor Operation

1. Remove battery access cover (A) on back of monitor and install 2 AA batteries. (Observe correct battery polarity which is embossed in the bottom of the battery compartment). Replace battery access cover.
2. The wireless monitor does not have an on/off switch. When batteries are installed correctly, the GENERATOR READY green LED light will flash once every 7 seconds indicating the status of the generator.

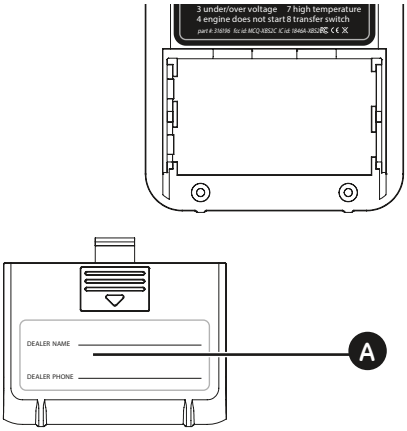

NOTICE If communication does not begin upon placing the generator in AUTO, installing batteries, and pressing System Update, the monitor may need to be re-linked. To link, follow Steps 3 through 6.

NOTICE The wireless monitor was linked to the generator at the factory. Communication will begin upon the installation of the batteries and the generator being placed in AUTO mode. You may need to press System Update one time.

Not for Reproduction

3. Locate the MENU AND ESCAPE buttons on the control panel **A**. Press and hold for 3 seconds to enter the linking mode.
4. "LINKING MODE" will scroll across the generator control panel.

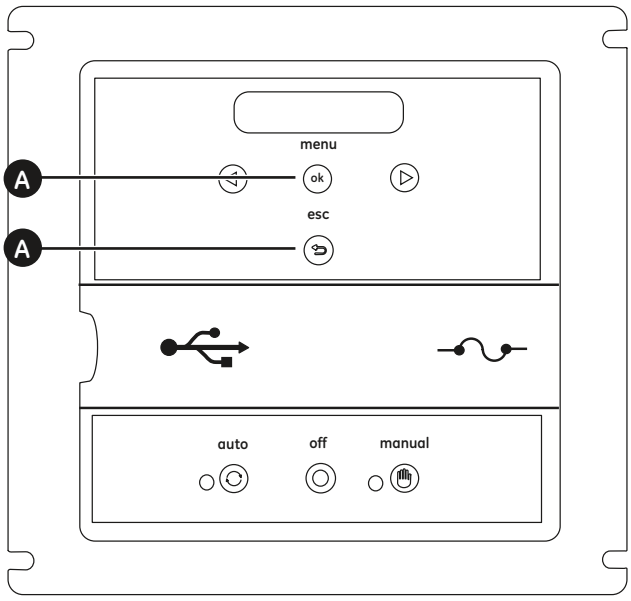

5. Locate and hold the SYSTEM UPDATE button **B** on the wireless monitor for 5 seconds. All 3 LEDs will flash until the monitor links to the generator. Once it links, the monitor will display the current state. The monitor will try to link for 1 minute. (This step can only be completed when the generator is in Linking Mode).
6. Once the link has been confirmed, press the OK button on the generator control panel to exit or the control board will turn off linking after 5 minutes. The generator will now communicate with the wireless monitor.

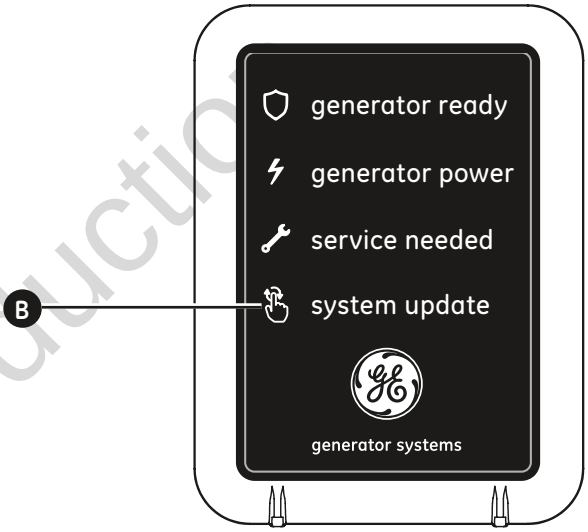

NOTICE It may take up to 1 minute for the monitor to begin displaying the generator status correctly.

Not for Reproduction

Standard Operation:

Wireless Monitor Status LED's

- The wireless monitor receives data from the generator every 10 minutes and displays the generator status through 3 LED's.
- Pressing the SYSTEM UPDATE button will provide current generator status by flashing the status LED's. When pressed, all 3 LEDs will flash until the generator status is received.

NOTICE Generator control panel must be in AUTO mode or no communication with monitor will occur.

- In order to conserve power and to extend battery life, the LED's are not lit continuously; instead they are briefly flashed as indicated below.

NOTICE During the weekly exercise cycle, the generator will run for 20 minutes, but it will not supply power to the building. During the exercise cycle, the monitor will continue blinking the GENERATOR READY green LED.

- GENERATOR READY - When active, the green LED will flash once every 7 seconds. The green LED indicates that the generator is in AUTO mode and that it is ready to run in the event of a loss of utility power.
- GENERATOR POWER - When active, the green LED will flash every 7 seconds. The green LED indicates that the generator is supplying power.
- SERVICE NEEDED - When active, the red LED will flash in a sequence that corresponds to the service code. For example, when Low Frequency scrolls across the control board, the red LED will flash 5 times with a 3 second pause between series of blinks until it is reset or the condition is corrected. When the red LED is lit, contact your nearest authorized service dealer.

NOTICE None of the conditions on the display unit can be cleared at the wireless monitor. All alerts must be cleared at the generator control panel.

NOTICE Service conditions will only be displayed on the basic monitor when the control board is placed in AUTO mode.

Other:

LED Lighting Codes

- Batteries Inserted - GENERATOR READY LED will light for 5 seconds.
- Wireless Communication Lost - SERVICE NEEDED LED will flash 20 fast pulses, then pause for 5 seconds, and repeat the sequence until the communication has been restored.

NOTICE Communication lost issues can typically be resolved by moving the wireless monitor closer, within the building, to the standby generator.

- Linking Error or Not Linked - SERVICE NEEDED LED will light for 4 seconds, pause for 4 seconds, and repeat the sequence until a successful link is completed.

Not for Reproduction

Installation Inspection

Before placing the generator system into service, inspect the entire installation carefully. Be sure to fill out the Installation Checklist on Page 9.

This completes the installation and start-up instructions. The Operator's Manual provides full details on Operation, Maintenance and Troubleshooting for this generator system.

Not for Reproduction

Notes

Not for Reproduction

Schematic Diagram

1.6L ENGINE

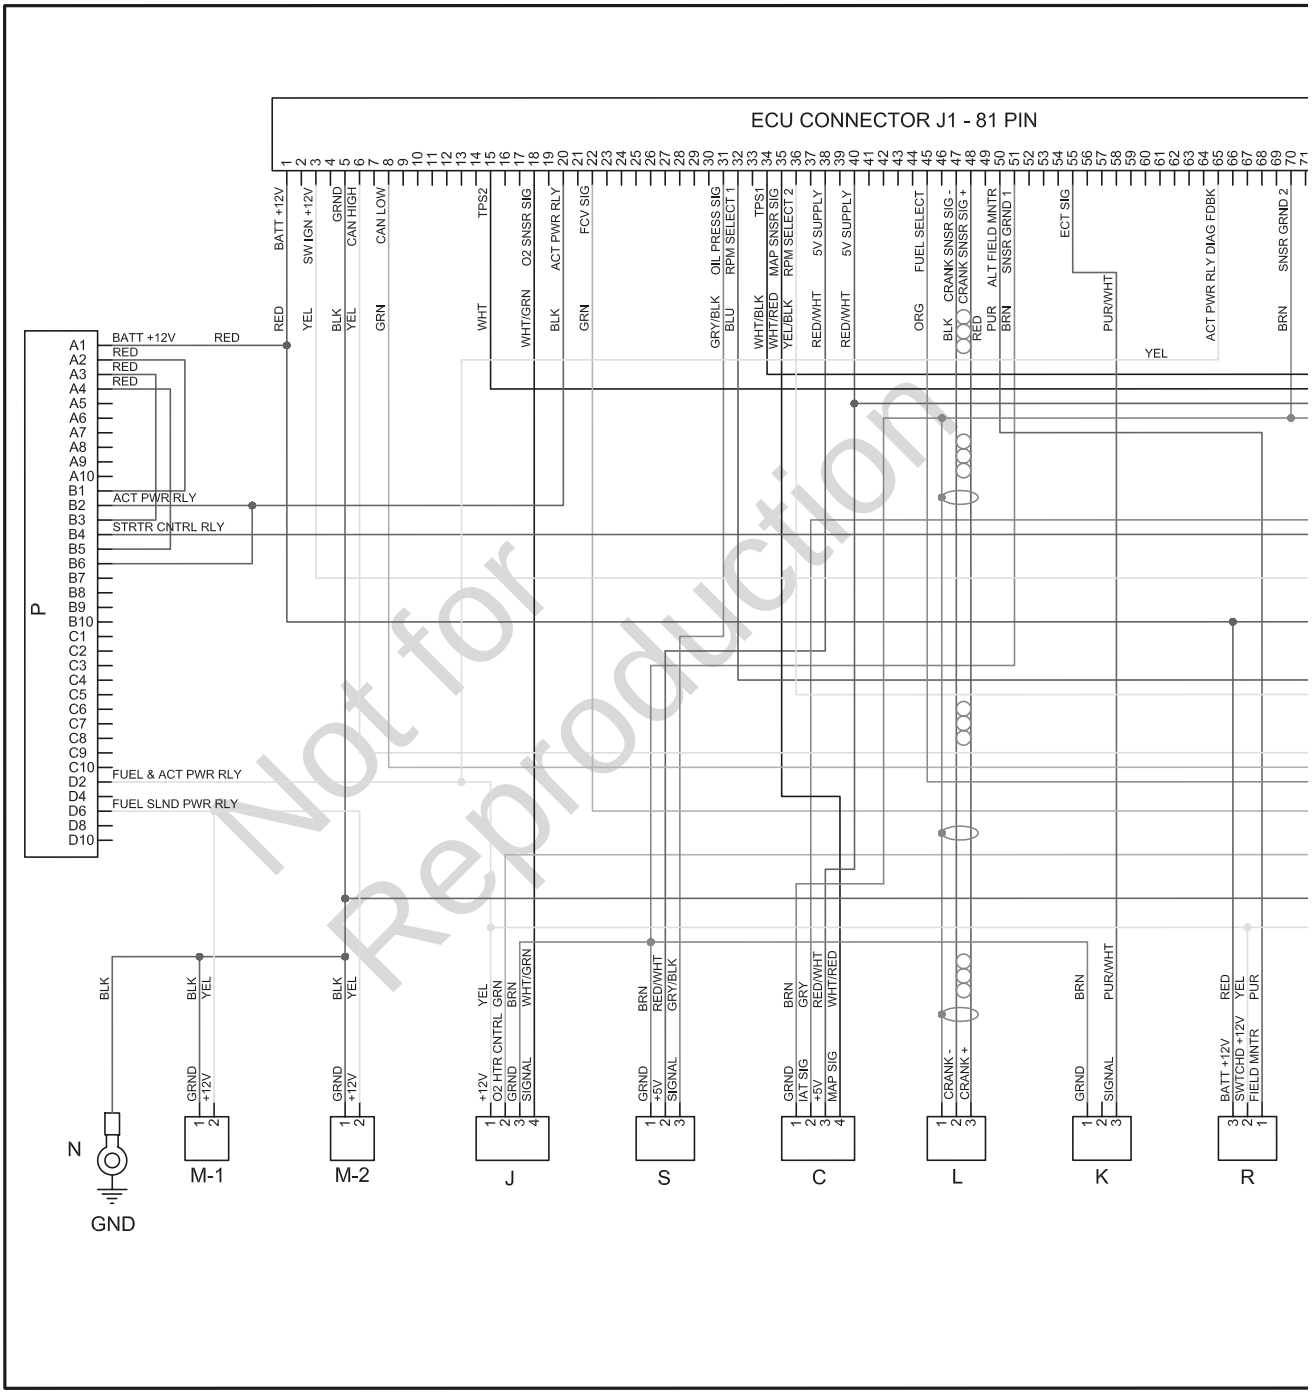

Schematic Diagram (continued)

WIRE HARNESS

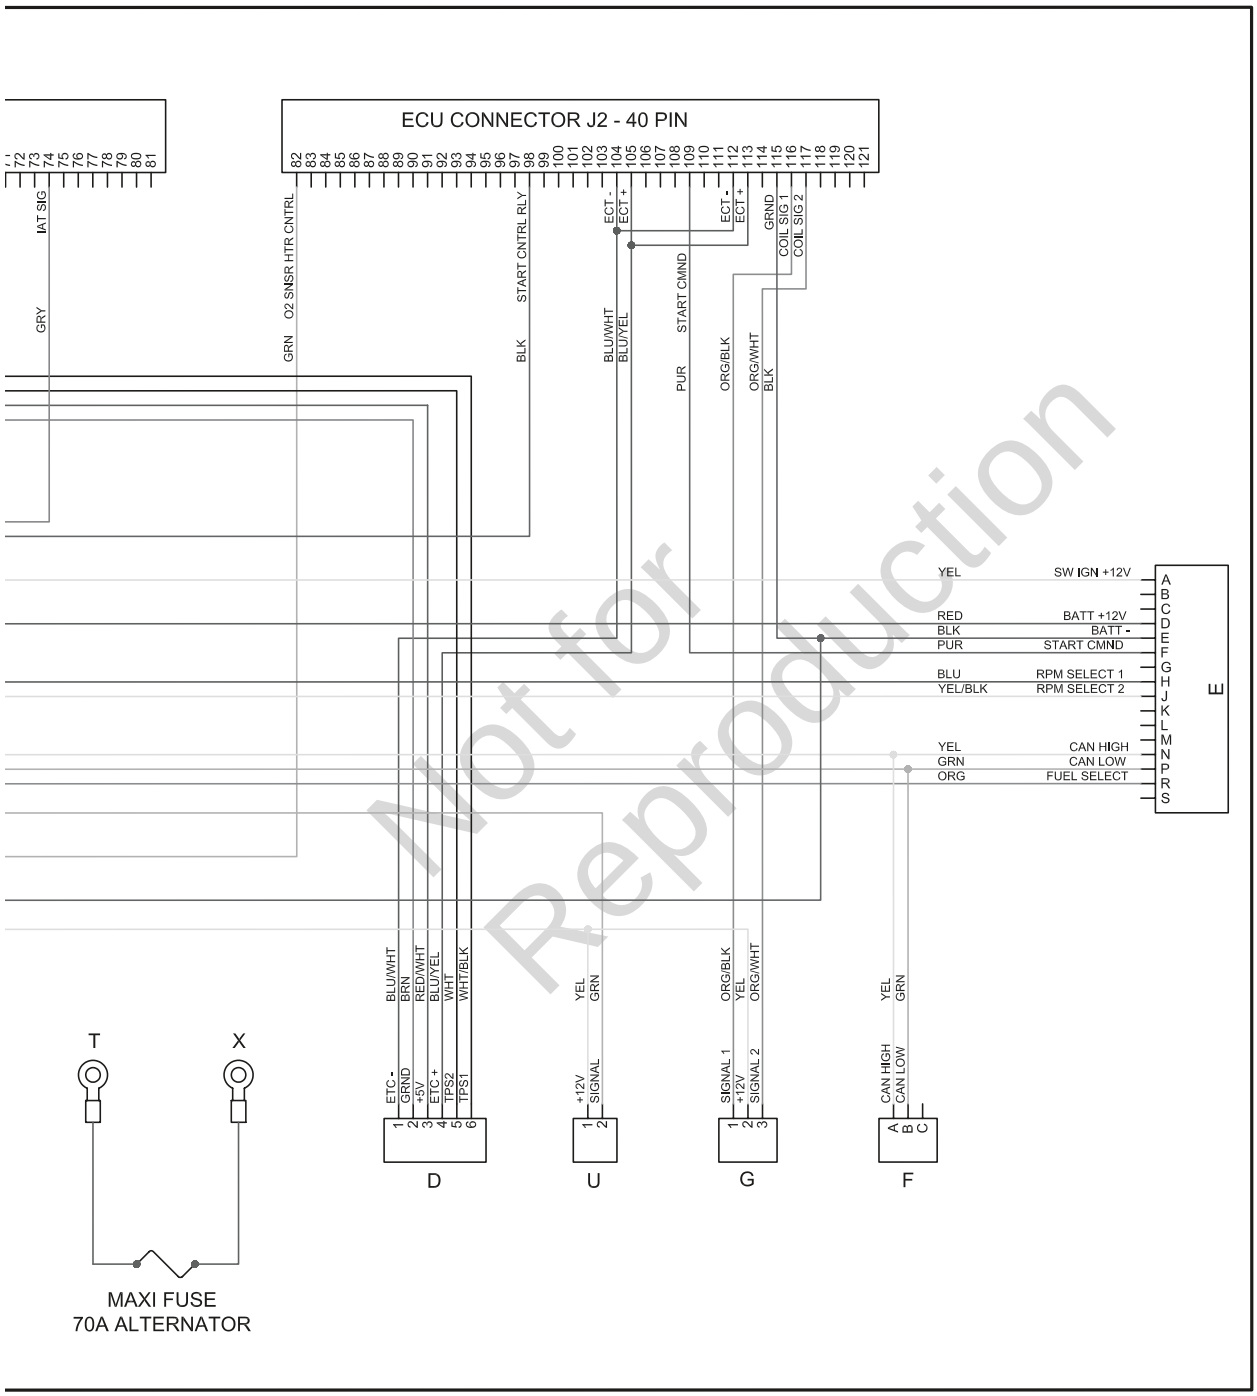

Wiring Diagram

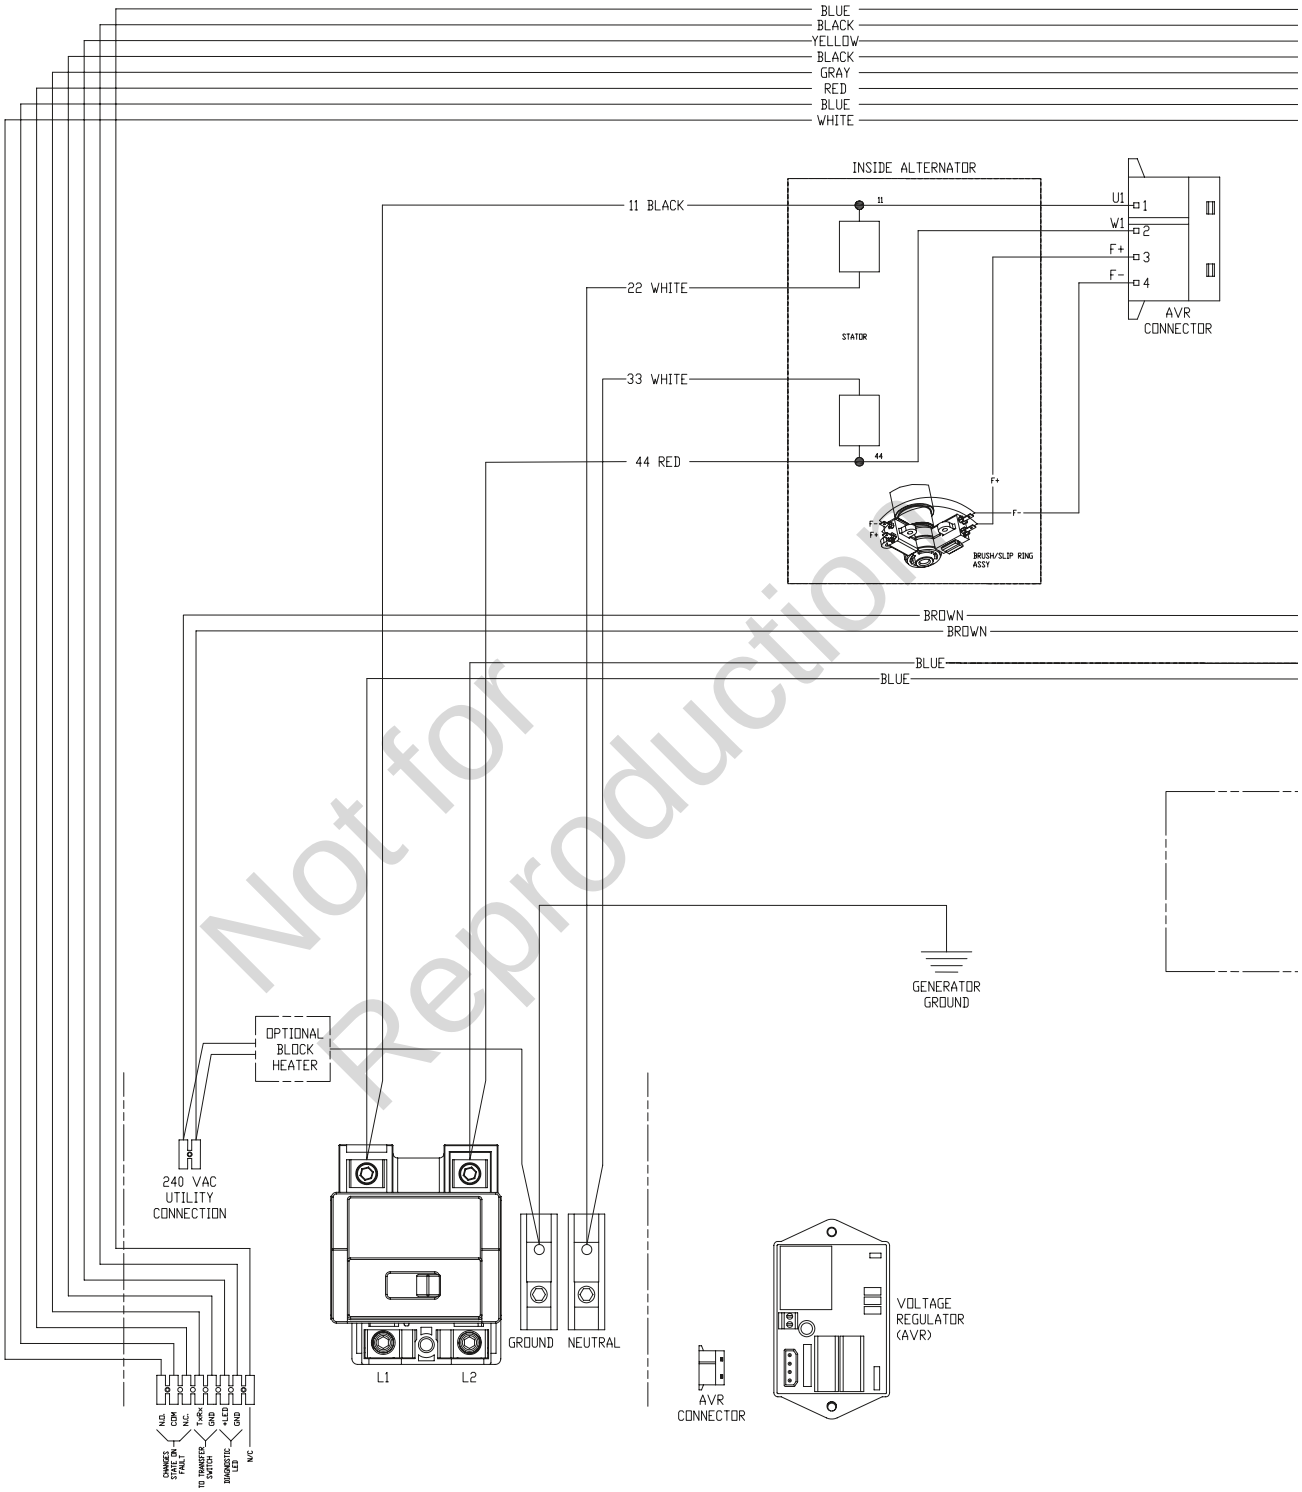

Not for Reproduction

Wiring Diagram

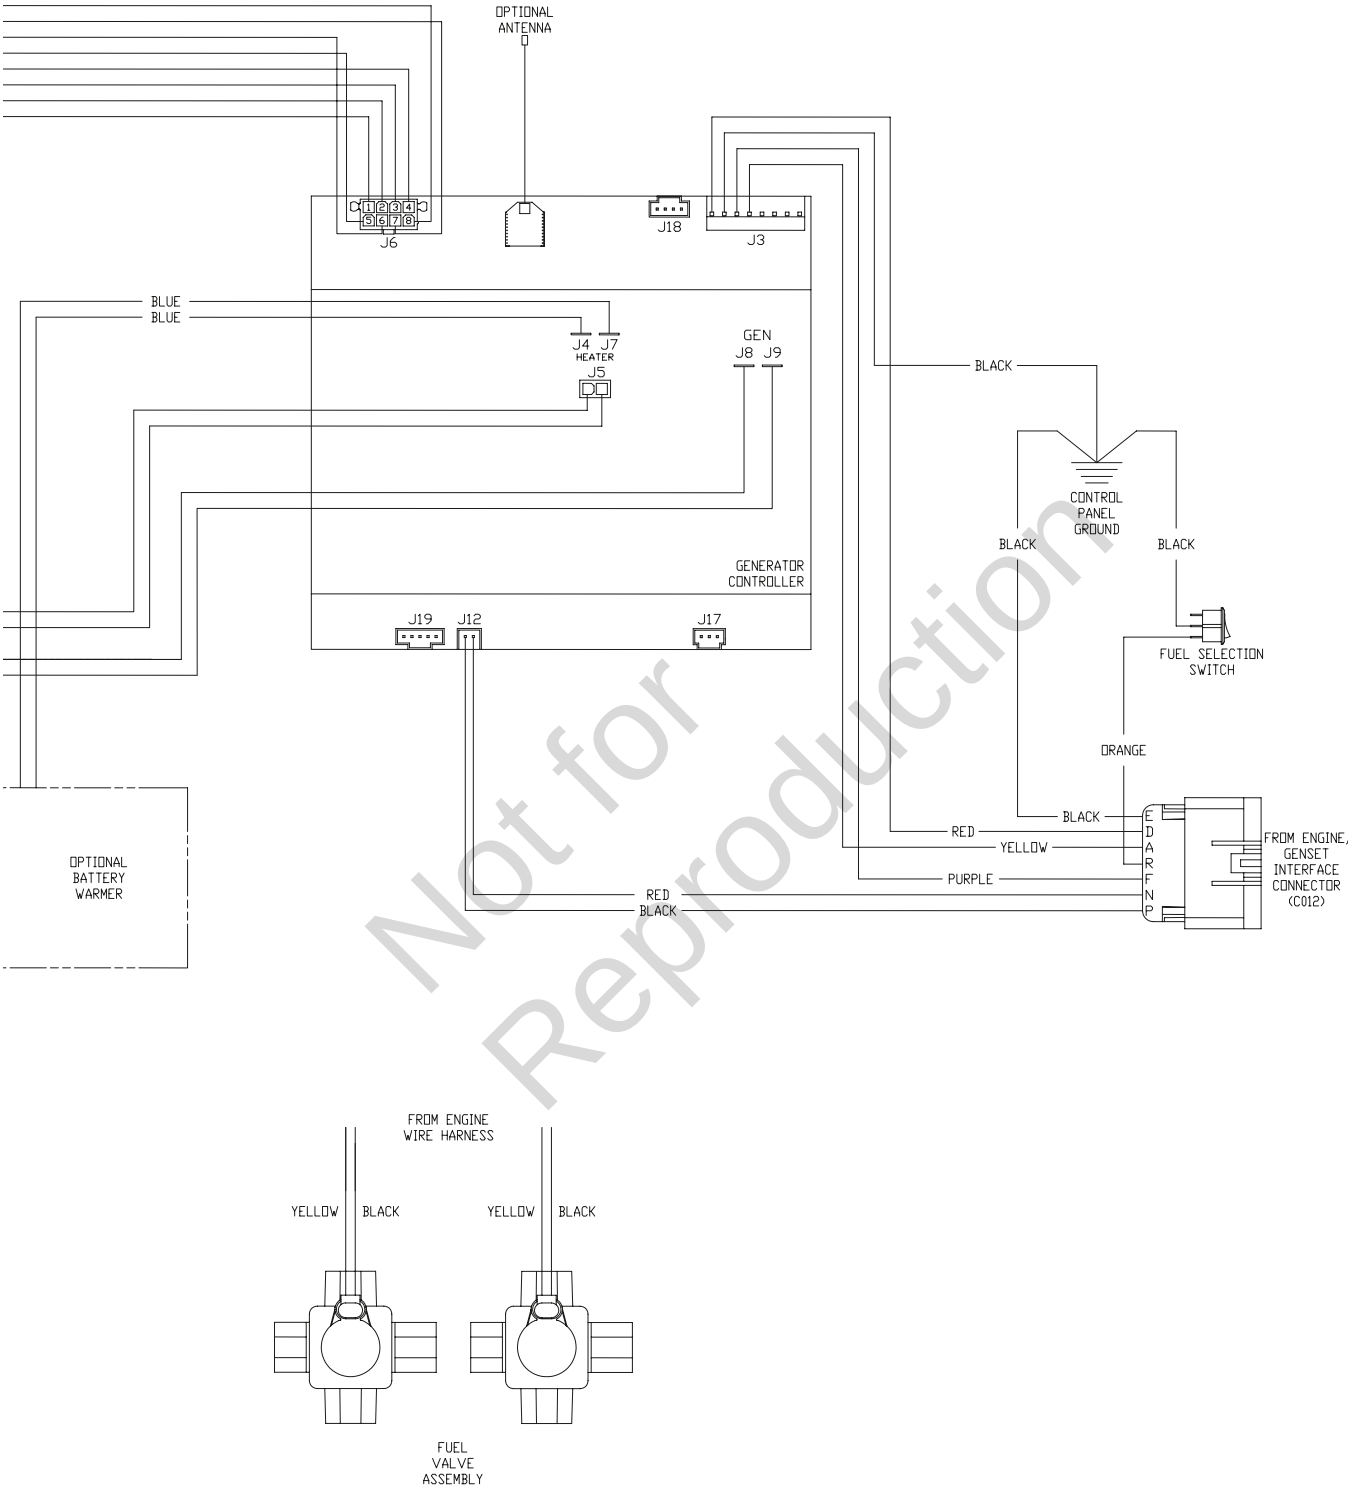

Not for Reproduction

Not for Reproduction

is a trademark of General Electric Company
and is under license by Briggs & Stratton
Power Products Group, LLC.

Copyright © 2013. All rights reserved. No part of this material may
be reproduced or transmitted in any form without the express written
permission of Briggs & Stratton Power Products Group, LLC.

80005279 Rev. B